# 1:1 ULTRABOND ADHESIVE UNIT Operations Manual

MagnumVenusProducts™

Rev. 10/2014

MagnumVenusProducts™

**CORPORATE HEADQUARTERS and MANUFACTURING**
**200A Perimeter Park Road · Knoxville, TN 37922 · USA · Tel: +1 (865) 321-8809**

**TECHNOLOGY CENTER and MANUFACTURING**
**1862 Ives Ave. * Kent, WA 98032 * Tel 253-854-2660 * Fax 253-854-1666**

E-mail: info@mvpind.com · www.mvpind.com

# Table of Contents


| SECTION: | Page |
|---|---|
| TERMS & CONDITIONS OF SALE | 4 |
| SAFETY & WARNINGS | 6 |
| INTRODUCTION | 15 |
| PRIMING the UNIT | 20 |
| MIXING & DISPENSING | 26 |
| FLUSHING & SHUT-DOWN | 29 |
| CHANGING the EMPTY PAIL | 30 |
| LOW LEVEL LIMIT ADJUSTMENT | 31 |
| COMPONENT MANUALS | 32 |
| PARTS DRAWINGS | 33 |
| REVISION INFORMATION | 52 |

# Terms & Conditions of Sale:

**GSSC, Inc.'s Terms & Conditions of Sale ("Terms & Conditions")** 588284v4

**1. ACCEPTANCE**: Acceptance of any purchase order from a customer or potential customer ("Buyer") is subject to credit approval by GSSC, Inc. ("Seller"), acceptance of the purchase order by Seller and, when applicable, any manufacturer, vendor, or other third party that provides goods to Seller for resale to Buyer ("Vendor"). If Seller, in its sole discretion, determines that Buyer's credit becomes unsatisfactory or it has reasonable grounds for insecurity, Seller reserves the right, upon notice to Buyer, to demand adequate assurance of due performance from Buyer and/or terminate any purchase order with no liability to Seller. BY REQUESTING A QUOTE FROM SELLER, ACCEPTING AN INVOICE FROM SELLER, OR PRESENTING A PURCHASE ORDER TO SELLER, BUYER CONFIRMS THAT THESE TERMS & CONDITIONS SHALL GOVERN ALL PURCHASES OF PRODUCTS OR MATERIALS PROVIDED TO BUYER BY SELLER ("GOODS"). GOODS SOLD BY SELLER ARE EXPRESSLY SUBJECT TO THE TERMS AND CONDITIONS SET FORTH HEREIN AND ANY DIFFERENT OR ADDITIONAL TERMS OR CONDITIONS SET FORTH IN A PURCHASE ORDER OR SIMILAR COMMUNICATION RECEIVED FROM BUYER ARE OBJECTED TO AND SHALL NOT BE BINDING UPON SELLER UNLESS SPECIFICALLY AGREED TO IN WRITING BY AN AUTHORIZED CORPORATE OFFICER OF SELLER.NO SELLER EMPLOYEE OR AGENT HAS THE AUTHORITY TO MODIFY THESE TERMS & CONDITIONS VERBALLY. SELLER OBJECTS TO AND REJECTS ANY TERMS BETWEEN BUYER AND ANY OTHER PARTY, AND NO SUCH TERMS, INCLUDING BUT NOT LIMITED TO ANY GOVERNMENT REGULATIONS OR "FLOWDOWN" TERMS, SHALL BE A PART OF OR INCORPORATED INTO ANY PURCHASE ORDER FROM BUYER TO SELLER, UNLESS AGREED TO IN WRITING BY AN AUTHORIZED REPRESENTATIVE OF SELLER.

**2. PRICES AND TAXES**: Buyer agrees to pay the prices quoted by Seller or listed on any related invoice, and is responsible for additional applicable shipping and handling charges, taxes, duties, and charges for import and export licenses and certificates. All prices quoted by Seller are subject to change without notice. Seller will generally collect applicable taxes along with the purchase price unless Buyer submits a valid tax exemption certificate, and indicates which Goods are covered by it. Prices on special-order Goods may be subject to change before shipment. In order to be corrected, any discrepancies in pricing and/or quantities on invoices must be reported by Buyer within thirty (30) days of the invoice date.

**3. PAYMENT**: Payment terms are 30 days net from the invoice date or upon such other terms approved by Seller in writing. Retainage shall not apply, and Buyer shall not hold back any retainage from Seller, even if retainage is part of any contract between Buyer and any other party. Payment is not contingent on Buyer's ability to collect or obtain funds from any other party. Credit card sales are billed at the time of purchase. Buyer expressly represents it is solvent at the time it places any purchase order with Seller. Seller, in its sole discretion, may determine that Buyer's financial condition requires full or partial payment prior to manufacture or shipment. If Buyer fails to make any payment when due, Seller reserves the right to suspend performance. Buyer agrees to pay a charge on all amounts past due at the rate of 1 ½% per month (18% per year) or the maximum lawful rate, whichever is less. In the event of non-payment, Buyer agrees to pay Seller's reasonable attorney fees and court costs, if any, incurred by Seller to collect payment, and all applicable interest charges. Seller may apply payments to any outstanding invoices unless Buyer provides specific payment direction.

**4. TITLE AND RISK OF LOSS OR DAMAGE**: As to Goods delivered directly by Seller, title passes upon delivery at the place Buyer receives possession; and, thereafter, all risk of loss or damage shall be on Buyer. All other sales are F.O.B., point of shipment, and Buyer takes title and assumes responsibility for risk of loss or damage at the point of shipment for such sales. Claims for Goods damaged in transit are Buyer's sole responsibility when not delivered directly by Seller.

**5. QUOTATIONS**: All quotations expire thirty (30) days from the date of the quotation unless otherwise noted on the quotation. This time limit applies even if Buyer uses the quotation to submit a job or project bid to any other party.

**6. ASSIGNMENT**: The Buyer's rights and responsibilities under any purchase order or these Terms & Conditions shall not be assigned by Buyer without the express written consent of the Seller.

**7. RETURN OF GOODS:** Permission to return items must be requested and granted in advance. No credit will be given if items are returned prior to requesting and receiving permission. Subject to the foregoing, Seller shall accept returns of Goods for any reason for a period of thirty (30) days following shipment for exchange or refund of the purchase price; provided, that such Goods must be unused and are subject to a 15% restocking charge, which may be increased or decreased, in the Seller's sole discretion, depending on the reason for such return. Any Goods which were special ordered by Buyer are may not be returned, and any such Goods which are returned are subject to a restocking/cancellation fee of 100% of the cost of the Goods. Goods shall be deemed accepted by Buyer (and cannot thereafter be returned), if Buyer fails to object to the Goods within thirty (30) days after the Goods are received by Buyer.

**8. CANCELLATION:** The Buyer may cancel any purchase order prior to shipment of the Goods by mutual agreement of the parties and upon payment to Seller of reasonable and proper cancellation charges.

**9. TERMINATION:** Seller may terminate the whole or any part of any purchase order if there is a material breach of these Terms & Conditions. In the event of any such breach, the Seller will provide Buyer with written notice of the nature of the breach and the Seller's intention to terminate for default. In the event Buyer does not cure such failure within ten (10) days of such notice, Seller may, by written notice, terminate the purchase order; provided, that Buyer shall continue its performance to the extent not terminated.

**10. CHANGE IN BUYER'S FINANCIAL CONDITION:** Seller reserves the right to cancel any order or to require full or partial payment in advance without liability to Seller in the event of: (i) insolvency of the Buyer; (ii) the filing of voluntary petition in bankruptcy by Buyer; (iii) the appointment of a Receiver or Trustee for the Buyer; (iv) the execution by Buyer of an assignment for benefit of creditors; or (v) past due payment on previous shipments to Buyer by Seller. Seller reserves the right to cancel Buyers credit at any time for any reason.

**11. INTERPRETATION RESPONSIBILITY; PRODUCT USE AND SAFETY**: Seller does not guarantee that the Goods it sells conform to any plans and specifications or intended use. When plans and specifications are involved, Buyer is solely responsible for verifying Seller's interpretations of such plans and specifications, and it is Buyer's sole responsibility to assure that Seller's Goods will be acceptable for any specific job. When Seller offers substitute Goods on any proposal, Buyer is solely responsible for confirming their acceptability.

**12. DELIVERY**: Shipping dates given in advance of actual shipment are approximate and not guaranteed. All contract dates and timelines begin upon receipt by Seller of a purchase order, Buyer's acceptance of these Terms & Conditions, and the payment of any required down payment.

**13. EXCUSABLE DELAYS**: Seller shall have no liability if its performance is delayed or prevented by causes beyond its reasonable control, including, without limitation, acts of nature, labor disputes, government priorities, transportation delays, insolvency or other inability to perform by any Vendor, or any other commercial impracticability. In the event of any such delay, the date of delivery or performance shall be extended for a period equal to the time lost by reason of delay. If Goods are held or stored beyond the delivery date for the convenience of Buyer, such Goods shall be so stored at the risk and expense of Buyer.

**14. CLAIMS:** Claims for any nonconforming Goods must be made by Buyer, in writing, within ten (10) days of Buyer's receipt of such Goods and must state with particularity all material facts concerning the claim then known to Buyer. Failure by Buyer to give notice within such ten (10) day period shall constitute an unqualified acceptance of such Goods by Buyer, and a waiver of any right to reject or revoke acceptance of such Goods.

**15. WARRANTIES**:
(a) SELLER'S WARRANTIES: Seller warrants that all Goods sold shall mechanically operate as specified and shall be free from faults in respect to materials and workmanship for a period of: (i) for parts, twelve (12) months from the date of invoice, and (ii) for systems, twelve (12) months from start-up, or, if earlier, eighteen (18) months from the date of the bill of lading. Seller also warrants that the Goods shall, upon payment in full by Buyer for the Goods, be free and clear of any security interests or liens. Buyer's exclusive remedy for breach of such warranties shall be limited to repair or replacement costs or termination of any security interests or liens, and Seller shall have no responsibility for reimbursing repair costs incurred by Buyer in connection with Goods without first giving written authorization for such charges. In any claims by the Buyer against the Seller in respect of the Goods, the liability of the Seller shall be limited to the value of the Goods. This warranty applies only to Goods properly used and maintained and does not apply to any Goods which are misused or neglected, or which has been installed, operated, repaired, altered or modified other than in accordance with instructions or written authorization by Seller. This warranty does not apply to any Goods not manufactured by Seller, and Buyer's sole warranty with respect to such Goods shall be that of the Seller's Vendor, if any.
(b) VENDOR'S WARRANTIES: Seller shall assign to Buyer any Vendor warranties and/or remedies provided to Seller by its Vendor.
(c) INTELLECTUAL PROPERTY INFRINGEMENT: SELLER DISCLAIMS ANY AND ALL WARRANTIES AND/OR INDEMNIFICATIONS AGAINST INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHTS OF ANY NATURE. SELLER SHALL, IF GIVEN PROMPT NOTICE BY BUYER OF ANY CLAIM OF INTELLECTUAL PROPERTY INFRINGEMENT WITH RESPECT TO ANY GOODS SOLD HEREUNDER, REQUEST THE APPLICABLE VENDOR TO GRANT FOR THE BUYER SUCH WARRANTY OR INDEMNITY RIGHTS AS SUCH VENDOR MAY CUSTOMARILY GIVE WITH RESPECT TO SUCH GOODS.
(d) LIMITATIONS: THERE ARE NO OTHER WARRANTIES WRITTEN OR ORAL, EXPRESS, IMPLIED OR BY STATUTE. SELLER SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NO REPAIR OF GOODS OR OTHER COSTS ARE ASSUMED BY SELLER UNLESS AGREED TO, IN ADVANCE, IN WRITING.
**16. LIMITATIONS OF LIABILITY**: UNLESS APPLICABLE LAW OTHERWISE REQUIRES, SELLER'S AND ANY VENDOR'S TOTAL LIABILITY TO BUYER, BUYER'S CUSTOMERS OR TO ANY OTHER PERSON, RELATING TO ANY PURCHASES GOVERNED BY THESE TERMS & CONDITIONS, FROM THE USE OF THE GOODS FURNISHED OR FROM ANY ADVICE, INFORMATION OR ASSISTANCE PROVIDED BY SELLER (BY ANY METHOD, INCLUDING A WEB SITE), IS LIMITED TO THE PRICE OF THE GOODS GIVING RISE TO THE CLAIM. NEITHER SELLER NOR ITS VENDORS SHALL BE LIABLE FOR ANY SPECIAL, INCIDENTAL, DIRECT, CONSEQUENTIAL OR PENAL DAMAGES, INCLUDING, BUT NOT LIMITED TO BACKCHARGES, LABOR COSTS, COSTS OF REMOVAL, REPLACEMENT, TESTING OR INSTALLATION, LOSS OF EFFICIENCY, LOSS OF PROFITS OR REVENUES, LOSS OF USE OF THE GOODS OR ANY ASSOCIATED GOODS, DAMAGE TO ASSOCIATED GOODS, LATENESS OR DELAYS IN DELIVERY, UNAVAILABILITY OF GOODS, COST OF CAPITAL, COST OF SUBSTITUTE GOODS, FACILITIES OR SERVICES, DOWNTIME, OR CLAIMS FROM BUYER'S CUSTOMERS OR OTHER PARTIES. IF SELLER FURNISHES BUYER WITH ADVICE OR OTHER ASSISTANCE WHICH CONCERNS ANY GOODS SUPPLIED HEREUNDER, OR ANY SYSTEM OR EQUIPMENT IN WHICH ANY SUCH GOODS MAY BE INSTALLED, AND WHICH IS NOT REQUIRED PURSUANT TO THESE TERMS & CONDITIONS, THE FURNISHING OF SUCH ADVICE OR ASSISTANCE WILL NOT SUBJECT SELLER TO ANY LIABILITY, WHETHER BASED ON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE) OR OTHER GROUNDS.
**17. BUYER'S USE OF GOODS**: Many factors beyond Seller's control contribute to the success of the Buyer's finished products, such as raw materials used to manufacture the products. Seller is not liability for the quality or quantity of finished products produced by Buyer with the use of the Goods.
**18. EXPORTS:** If Goods are sold for export, Seller's standard terms & condition for export sales, if any, shall also apply. Acceptance of export orders is not valid unless confirmed in writing by Seller. Buyer, and not Seller, is responsible for compliance with all United States export control rules and regulations. Buyer shall not name Seller as shipper or exporter of record in connection with the export of any Goods purchased from Seller.
**19. INSTALLATION**: Installation of the Goods is the responsibility of Buyer, unless otherwise indicated in the quotation or invoice provided to Buyer. Notwithstanding the foregoing, however, Seller will provide installation supervision personnel within thirty (30) days of Buyer's request. If an installation for which the Seller is to participate is delayed by the Buyer more than six (6) months after the date of shipment of the Goods, or if Buyer's facility, materials, or parts are not prepared for installation for such period of time, Seller shall be entitled to invoice the Buyer for the anticipated installation costs, up to $1,250 per day plus expenses, for each of Seller's installations technicians which are on site.
**20. ANTI-MONEY LAUNDERING RESTRICTIONS**: Seller rejects questionable purchase orders and payments: Except for pre-approved credit arrangements, Seller rejects third-party payments, cashiers' checks, money orders and bank drafts. Seller accepts only checks imprinted with Buyer's name; wire transfers originated in Buyer's account; letters of credit with Buyer as account party; and credit or debit cards in Buyer's name. All payments must be by single instrument in the amount of the invoice, less credits, from banks acceptable to Seller.
**21. GOVERNING LAW**: These Terms & Conditions and all disputes related to it shall be governed by the laws of the State of Florida, United States of America, without giving effect to its conflict of law rules.
**22. JURISDICTION AND VENUE:** The parties hereby irrevocably submit to the jurisdiction of the state courts of the State of Florida and to the jurisdiction of the United States District Court for the Middle District of Florida, for the purpose of any suit, action, or other proceeding related to, arising out of or based upon these Terms & Conditions or in any way related to, arising out of or involving sale of Goods hereunder; waive and agree not to assert by way of motion, as a defense, or otherwise, in any such suit, action, or proceeding, any claim that it is not subject personally to the jurisdiction of the above-named courts, that its property is exempt or immune from attachment or execution, that the suit, action, or proceeding is brought in any inconvenient forum, that the venue of the suit, action, or proceeding is improper, or that these Terms & Conditions or the subject matter hereof may not be enforced in or by such court; and waive and agree not to seek any review by any court of any other jurisdiction which may be called upon to grant an enforcement of the judgment of any such Florida state or federal court. The parties hereby consent to service of process by registered mail at the address to which notice is to be given. The exclusive venue for any proceeding under these Terms & Conditions shall be solely in any state court in Pinellas County, Florida, or the Federal District Court for the Middle District of Florida, Tampa Division, sitting in Tampa, Florida. Buyer acknowledges that the prices for Goods offered hereunder are in part dependent on Buyer's consent to jurisdiction in Florida and exclusive venue in Pinellas County, Florida or the Federal District Court for the Middle District of Florida, Tampa Division, sitting in Tampa, Florida, and without Buyer's consent to this jurisdiction and venue provision the prices for the Goods may be higher.
**23. GENERAL:** Any representation, affirmation of fact and course of dealing, promise or condition in connection therewith or usage of trade not contained herein, shall not be binding on either party. If any provision hereof shall be unenforceable, invalid or void for any reason, such provision shall be automatically voided and shall not be part of these Terms & Conditions and the enforceability or validity of the remaining provisions of these Terms & Conditions shall not be affected thereby.

**TO THE EXTENT NOT CONTRARY TO APPLICABLE LAW, THE FOLLOWING SHALL APPLY:**
**24.** Buyer waives any available homestead exemption as well as any and all requirements or rights with regard to notice, demand, presentment

***IMPORTANT NOTICE:*** *THIS INSTRUMENT PERMITS SELLER TO OBTAIN AND USE YOUR INDIVIDUAL CREDIT HISTORY FOR CREDIT EVALUATION PURPOSES.*

# SAFETY & WARNING INFORMATION:

**OPERATING YOUR POLYESTER SYSTEM SAFELY**

**1. Introduction**

Any tool, if used improperly, can be dangerous. Safety is ultimately the responsibility of those using the tool. In like manner, safe operation of polyester processes is the responsibility of those who use such processes and those who operate the equipment. This manual outlines procedures to be followed in conducting polyester operations safety. This system has been specifically designed for use of Polyester Resin, Gel-Coat, and Methyl Ethyl Ketone Peroxides (MEKP) applications. Other formulations or blends considered for use in this equipment is strictly prohibited without the expressed consent by Magnum Venus Products Inc. Magnum Venus Products cannot eliminate every danger nor foresee every circumstance that might cause an injury during equipment operation. Some risks, such as the high pressure liquid stream that exits the spray tip, are inherent to the nature of the machine operation and are necessary to the process in order to manufacture the end-product. For this reason, ALL personnel involved in polyester operations should read and understand the Safety Manual. It is very important for the safety of employees involved in the operation that equipment operators, maintenance and supervisory personnel understand the requirements for safe operation. Each user should examine his own operation, develop his own safety program and be assured that his equipment operators follow correct procedures. Magnum Venus Products hopes that this manual is helpful to the user and recommends that the precautions in this manual be included in any such program. Magnum Venus Products recommends this Safety Manual remain on your equipment at all times for your personnel safety. In addition to the manual, Magnum Venus Products recommends that the user consult the regulations established under the Occupational Safety & Health Act (OSHA), particularly the following sections:

1910.94 Pertaining to Ventilation.

1910.106 Pertaining to flammable liquids

1910.107 Pertaining to spray finishing operations, particularly Paragraph (m) Organic Peroxides and Dual Component Coatings.

Other standards and recognized authorities to consult are the National Fire Protection Association (NFPA) bulletins as follows:

NFPA No.33 Chapter 14, Organic Peroxides and Dual Component Materials

NFPA No.63 Dust Explosion Prevention

NFPA No.70 National Electrical Code

NFPA No.77 Static Electricity

NFPA No.91 Blower and Exhaust System

NFPA No.654 Plastics Industry Dust Hazards

Type of Fire Extinguishing equipment recommended: Fire Extinguisher – code ABC, rating number 4a60bc.

Extinguishing Media – Foam, Carbon Dioxide, Dry Chemical, Water Fog.

Copies of the above bulletins are available, at a nominal charge from:

National Fire Protection Association
470 Atlantic Avenue
Boston, MA 02210

Research Report No.11 of the American Insurance Association deal with “Fire, Explosion and Health Hazards of Organic Peroxides”. It is published by:

American Insurance Association
85 John Street
New York, NY 10038

Local codes and authorities also have standards to be followed in the operation of your spraying equipment. Your insurance carrier will be helpful in answering questions that arise in your development of safe procedures.

**1.2 Personal Safety Equipment**

Magnum Venus Products recommends the following Personal Safety Equipment for conducting safe operations of the Polyester Systems:

Magnum Venus Products recommends that the user consult the state and local regulations established for all Safety equipment listed.

**2.0 Material Safety**

**2.1 Hazards Associated with Laminating Operations**

The major hazards which should be guarded against in polyester laminating operations are those associated with:

1. The flammability and explosion dangers of the catalyst normally used – Methyl Ethyl Ketone Peroxide (MEKP).

2. The flammability dangers of clean-up solvents sometimes used (Magnum Venus Products recommends that clean-up solvents be non-flammable), and of resin diluents used, such as styrene.

3. The flammability dangers of catalyst diluents, if used. (Magnum Venus Products recommends that catalyst not be diluted.

4. The flammability dangers of the uncured liquid resins used.

5. The combustibility dangers of the cured laminate, accumulations of over spray, and laminate sandings.

6. The toxicity dangers of all the chemicals used in laminating operations with respect to ingestion, inhalation and skin and eye hazards.

### 2.2 Catalyst (Methyl Ethyl Ketone Peroxide)

MEKP is among the more hazardous materials found in commercial channels. The safe handling of the “unstable (reactive)” chemicals presents a definite challenge to the plastics industry. The highly reactive property which makes MEKP valuable to the plastics industry in producing the curing reaction of polyester resins also produces the hazards which require great care and caution in its storage, transportation, handling, processing and disposal. MEKP is a single chemical. Various polymeric forms may exist which are more or less hazardous with respect to each other. These differences may arise not only from different molecular structures (all are, nevertheless, called “MEKP”) and from possible trace impurities left from the manufacture of the chemicals, but may also arise by contamination of MEKP with other materials in its storage or use. Even a small amount of contamination with acetone, for instance, may produce an extremely shock-sensitive and explosive compound.

**Contamination with promoters or materials containing promoters, such as laminate sandings, or with any readily oxidizing material, such as brass or iron, will cause exothermic “redox” reactions which can become explosive in nature. Heat applied to MEKP, or heat build-up from contamination reactions can cause it to reach what is called its Self-Accelerating Decomposition Temperature (SADT).**

Researchers have reported measuring pressure rates-of-rise well in excess of 100,000 psi per second when certain MEKP’s reach their SADT. (For comparison, the highest pressure rate-of-rise listed in NFPA Bulletin NO.68, “Explosion Venting”, is 12,000 psi per second for an explosion of 12% acetylene and air. The maximum value listed for a hydrogen explosion is 10,000 psi per second. Some forms of MEKP, if allowed to reach their SADT, will burst even an open topped container. This suggests that it is not possible to design a relief valve to vent this order of magnitude of pressure rate-of-rise. The user should be aware that any closed container, be it a pressure vessel, surge chamber, or pressure accumulator, could explode under certain conditions. There is no engineering substitute for care by the user in handling organic peroxide catalysts. If, at any time, the pressure relieve valve on top of the catalyst tank should vent, the area should be evacuated at once and the fire department called. The venting could be the first indication of a heat, and therefore, pressure build-up that could eventually lead to an explosion. Moreover, if a catalyst tank is sufficiently full when the pressure relief valve vents, some catalyst may spray out, which could cause eye injury. For this reason, and many others, anyone whose job puts them in an area where this vented spray might go, should always wear full eye protection even when laminating operations are not taking place.

Safety in handling MEKP depends to a great extent on employee education, proper safety instructions and safe use of the chemicals and equipment. Workers should be thoroughly informed of the hazards that may result from improper handling of MEKP, especially in regards to contamination, heat, friction and impact. They should be thoroughly instructed regarding the proper action to be taken in the storage, use and disposal of MEKP and other hazardous materials used in the laminating operation. In addition, users should make every effort to:

A. Store MEKP in a cool, dry place in original containers away from direct sunlight and away from other chemicals.

B. Keep MEKP away from heat, sparks and open flames.

C. Prevent contamination of MEKP with other materials, including polyester over spray and sandings, polymerization accelerators and promoters, brass, aluminum and non-stainless steels.

D. Never add MEKP to anything that is hot, since explosive decomposition may result.

E. Avoid contact with skin, eyes and clothing. Protective equipment should be worn at all times. During clean-up of spilled MEKP, personal safety equipment, gloves and eye protection must be worn. Firefighting equipment should be at hand and ready.

F. Avoid spillage, which can heat up to the point of self-ignition.

G. Repair any leaks discovered in the catalyst system immediately, and clean up the leaked catalyst at once in accordance with the catalyst manufacturer's instructions.

H. Use only original equipment or equivalent parts from Magnum Venus Products in the catalyst system (i.e.: hoses, fitting, etc.) because a dangerous chemical reaction may result between substituted parts and MEKP.

I. Catalyst accumulated from the purging of hoses or the measurement of fluid output deliveries should never be returned to the supply tank, such catalyst should be diluted with copious quantities of clean water and disposed of in accordance with the catalyst manufacturer's instructions.

The extent to which the user is successful in accomplishing these ends and any additional recommendations by the catalyst manufacturer determines largely the safety that will be present in his operation.

**2.3 Clean-Up Solvents and Resin Diluents**

***WARNING***

**A hazardous situation may be present in your pressurized fluid system! Hydrocarbon Solvents can cause an explosion when used with aluminum or galvanized components in a closed (pressurized) fluid system (pump, heaters, filters, valves, spray guns, tanks, etc.). The explosion could cause serious injury, death and/or substantial property damage. Cleaning agents, coatings, paints, etc. may contain Halogenated Hydrocarbon Solvents. Some Magnum Venus Products spray equipment includes aluminum or galvanized components and will be affected by Halogenated Hydrocarbon Solvents.**

A. There are three key elements to the Halogenated Hydrocarbon (HHC) solvent hazard.

a. The presence of HHC solvents. 1,1,1 – Trichloroethane and Methylene Chloride are the most common of these solvents. However, other HHC solvents are suspect if used; either as part of paint or adhesives formulation, or for clean-up flushing. b. Aluminum or Galvanized Parts. Most handling equipment contains these elements. In contact with these metals, HHC solvents could generate a corrosive reaction of a catalytic nature.

b. Equipment capable of withstanding pressure. When HHC solvent contacts aluminum or galvanized parts inside a closed container such as a pump, spray gun, or fluid handling system, the chemical reaction can, over time, result in a build-up of heat and pressure, which can reach explosive proportions.

When all three elements are present, the result can be an extremely violent explosion. The reaction can be sustained with very little aluminum or galvanized metal; any amount of aluminum is too much.

A. The reaction is unpredictable. Prior use of an HHC solvent without incident (corrosion or explosion) does NOT mean that such use is safe. These solvents can be dangerous alone (as a clean-up or flushing agent) or when used as a component or a coating material. There is no known inhibitor that is effective under all circumstances. Furthermore, the mixing of HHC solvents with other materials or solvents, such as MEKP, alcohol, and toluene, may render the inhibitors ineffective.

B. The use of reclaimed solvents is particularly hazardous. Reclaimers may not add any inhibitors. Also, the possible presence of water in reclaimed solvents could feed the reaction.

C. Anodized or other oxide coatings cannot be relied upon to prevent the explosive reaction. Such coatings can be worn, cracked, scratched, or too thin to prevent contact. There is no known way to make oxide coatings or to employ aluminum alloys, which will safely prevent the chemical reaction under all circumstances.

D. Several solvent suppliers have recently begun promoting HHC solvents for use in coating systems. The increasing use of HHC solvents is increasing the risk. Because of their exemption from many State Implementation Plans as Volatile Organic Compounds

(VOC's), their low flammability hazard, and their not being classified as toxic or carcinogenic substances, HHC solvents are very desirable in many respects.

***WARNING:*** **Do not use Halogenated Hydrocarbon solvents in pressurized fluid systems having aluminum or galvanized wetted parts.**

***NOTE:*** **Magnum Venus Products is aware of NO stabilizers available to prevent Halogenated Hydrocarbon solvents from reaction under all conditions with aluminum components in closed fluid system.** ***TAKE IMMEDIATE ACTION…*** **Halogenated Hydrocarbon solvents are dangerous when used with aluminum components in a closed fluid system.**

A. Consult your material supplier to determine whether your solvent or coating contains Halogenated Hydrocarbon Solvents.

B. Magnum Venus Products recommends that you contact your solvent supplier regarding the best non-flammable clean-up solvent with the heat toxicity for your application.

C. If, however, you find it necessary to use flammable solvents, they must be kept in approved, electrically grounded containers.

D. Bulk solvent should be stored in a well-ventilated, separate building, 50 feet away from your main plant.

E. You should allow only enough solvent for one day's use in your laminating area.

F. "NO SMOKING" signs must be posted and observed in all areas of storage or where solvents and other flammable materials are used.

G. Adequate ventilation (as covered in OSHA Section 1910.94 and NFPA No.91) is important wherever solvents are stored or used, to minimize, confine and exhaust the solvent vapors.

H. Solvents should be handled in accordance with OSHA Section 1910.106 and 1910.107.

**2.4 Catalyst Diluents**

Magnum Venus Products spray-up and gel-coat systems currently produced are designed so that catalyst diluents are not required. Magnum Venus Products, therefore, recommends that diluents not be used. This avoids the possible contamination which could lead to an explosion due to the handling and mixing of MEKP and diluents. In addition, it eliminates any problems from the diluents being contaminated through rust particles in drums, poor quality control on the part of the diluents suppliers, or any other reason. If, however, diluents are absolutely required, contact your catalyst supplier and follow his instructions explicitly. Preferable, the supplier should premix the catalyst to prevent possible “on the job” contamination while mixing.

***WARNING***

**If diluents are not used, it should be remembered that catalyst spillage, gun, hose and packing leaks are potentially more hazardous, since each drop contains a higher concentration of catalyst, and therefore will react quicker with over spray and the leak.**

**2.5 Cured Laminate, Overspray and Laminate Sandings Accumulation**

A. Remove all accumulations of overspray, FRP sandings, etc. from the building as they occur. If this waste is allowed to build up, spillage of catalyst is more likely to start a fire; in addition, the fire would burn hotter and longer.

B. Floor coverings, if used, should be non-combustible.

C. Spilled or leaked catalyst may cause a fire if it comes in contact with an FRP product, over-sprayed chop or resin, FRP sandings or any other material with MEKP.

To prevent this spillage and leakage, you should:

1. Maintain your Magnum Venus Products System. Check the gun several times daily for catalyst and resin packing or valve leaks. REPAIR ALL LEAKS IMMEDIATELY.

2. Never leave the gun hanging over, or lying inside the mold. A catalyst leak in this situation would certainly damage the part, possibly the mold, and may cause a fire.

3. Inspect resin and catalyst hoses daily for wear or stress at the entry and exits of the boom sections and at the hose and fittings. Replace if wear or weakness is evident or suspected.

4. Arrange the hoses and fiberglass roving guides so that the fiberglass strands DO NOT rub against any of the hoses at any point. If allowed to rub, the hose will be cut through, causing a hazardous leakage of material which could increase the danger of fire. Also, the material may spew onto personnel in the area.

### 2.7 Toxicity of Chemicals

A. Magnum Venus Products recommends that you consult OSHA Sections 1910.94, 1910.106, 1910.107 and NFPA No.33, Chapter 14, and NFPA No.91.

B. Contact your chemical supplier(s) and determine the toxicity of the various chemicals used as well as the best methods to prevent injury, irritation and danger to personnel.

C. Also determine the best methods of first aid treatment for each chemical used in your plant.

### 2.8 Treatment of Chemical Injuries

Great care should be used in handling the chemicals (resins, catalyst and solvents) used in polyester systems. Such chemicals should be treated as if they hurt your skin and eyes and as if they are poison to your body. For this reason, Magnum Venus Products recommends the use of protective clothing and eye wear in using polyester systems. However, users should be prepared in the event of such an injury. Precautions include:

1. Know precisely what chemicals you are using and obtain information from your chemical supplier on what to do in the event the chemical gets onto your skin or into the eyes, or is swallowed.

2. Keep this information together and easily available so that it may be used by those administering first aid or treating the injured person.

3. Be sure the information from your chemical supplier includes instructions on how to treat any toxic effects the chemicals have.

***WARNING***

**Contact your doctor immediately in the event of any injury and give him the information you have collected. If your information includes first aid instructions, administer first aid immediately while you are contacting your doctor.**

Fast treatment of the outer skin and eyes that contact such chemicals generally includes immediate and thorough washing of the exposed skin and immediate and continuous flushing of the eyes with lots of clean water for at least 15 minutes or more. These general instructions of first aid treatment, however, may be incorrect for some chemicals; that is why you must know the chemicals and treatment before an accident occurs. Treatment for swallowing a chemical frequently depends upon the nature of the chemical.

***NOTE:*** **Refer to your System User Manual for complete and detailed operating instructions and service information.**

### 3.0 Equipment Safety

***WARNING***

**Magnum Venus Products suggests that personal safety equipment such as EYE GOGGLES, GLOVES, EAR PROTECTION, and RESPIRATORS be worn when servicing or operating this equipment. Ear protection should be worn when operating a fiberglass chopper to protect against hearing loss since noise levels can be as high as 116 dB (decibels). This equipment should only be operated or serviced by technically trained personnel!**

***WARNING***

**Never place fingers, hands, or any body part near or directly in front of the spray gun fluid tip. The force of the liquid as it exits the spray tip can cause serious injury by shooting liquid through the skin. NEVER LOOK DIRECTLY INTO THE GUN SPRAY TIP OR POINT THE GUN AT OR NEAR ANOTHER PERSON. (TREAT THE GUN AS IF IT WERE A LOADED PISTOL.)**

### 3.1 Emergency Stop Procedures

The following steps should be followed in order to stop the machinery in an emergency situation

1. The ball valve located where the air enters the power head of the resin pump, should be moved to the “OFF” or closed position. To do this, simply rotate the lever on the ball valve 90 degrees. Doing this will cause all the system air to bleed out of the system in a matter of a few seconds, making the system incapable of operating

***NOTE: Step 2 is a precautionary step and should be followed whenever the above mentioned ball valve is activated to the stop mode. Failure to do so, can damage the regulators and components on reactivating to the “ON” position.***

2. Turn all system regulators to the “OFF” position (counter-clockwise) position

***NOTE: Verify that the Catalyst relief line, located on the catalyst manifold, and the resin return line, located on the resin filter, are secured relieving catalyst and resin fluid pressure.***

3. Catalyst pressure in the catalyst pump can be eliminated by rotating the ball valve on the catalyst manifold 90 degrees to the “open” or “on” position.

***Note: The “open” or “on” position is when the ball valve handle is parallel (in line) with the ball valve body. The “closed” or “off” position is when the ball valve handle is perpendicular (across) the ball valve body.***

4. Resin pressure in the resin pump can be eliminated by rotating the ball valve on the resin filter 90 degrees to the “open” or “on” position. Place a container under the ball valve to catch any resin that is ejected out of the valve.

### 3.2 Grounding

Grounding an object means providing an adequate path for the flow of the electrical charge from the object to the ground. An adequate path is one that permits charge to flow from the object fast enough that it will not accumulate to the extent that a spark can be formed. It is not possible to define exactly what will be an adequate path under all conditions since it depends on many variables. In any event, the grounding means should have the lowest possible electrical resistance. Grounding straps should be installed on all loose conductive objects in the spraying area. This includes material containers and equipment. Magnum Venus Products recommends grounding straps be made of AWG No.18 stranded wire as a minimum and the larger wire be used where possible. NFPA Bulletin No77 states that the electrical resistance of such a leakage path may be as low as 1 meg ohm (10 ohms) but that resistance as high as 10,000 meg ohms will produce an adequate leakage path in some cases. Whenever flammable or combustible liquids are transferred from one container to another, or from one container to the equipment, both containers or container and equipment shall be effectively bonded and grounded to dissipate static electricity. For further information, see **National Fire Protection Association** ( NFPA) 77, titled "Recommended Practice on Static Electrical". Refer especially to section 7-7 titled "Spray Application of Flammable and Combustible Materials". Check with local codes and authorities for other specific standards that might apply to your application. NEVER USE HARD MATERIALS SUCH AS WIRE, PINS, ETC., TO CLEAR A PLUGGED GUN. HARD MATERIALS CAN CAUSE PERMANENT DAMAGE. DAB WITH A BRISTLE BRUSH, BLOW BACKWARDS WITH AIR UNTIL CLEAR WHILE WEARING A PROTECTIVE EYE SHIELD. REPEAT AS MANY TIMES AS NECESSARY. DO NOT PERFORM ANY MAINTENANCE OR REPAIRS UNTIL YOU HAVE FOLLOWED THE PRECAUTIONS STATED ABOVE. IF YOU, AS AN EQUIPMENT OPERATOR OR SUPERVISOR, DO NOT FEEL THAT YOU HAVE BEEN ADEQUATELY TRAINED OR INSTRUCTED AND THAT YOU LACK THE TECHNICAL KNOWLEDGE TO OPERATE OR PERFORM MAINTENANCE ON A PIECE OF MAGNUM VENUS PRODUCTS EQUIPMENT, PLEASE CALL MAGNUM VENUS PRODUCTS BEFORE OPERATING OR PERFORMING MAINTENANCE ON THE EQUIPMENT. IF YOU HAVE ANY QUESTIONS REGARDING THE ABOVE PRECAUTIONS OR ANY SERVICE OR OPERATION PRECEDURES, CALL YOUR MAGNUM VENUS PRODUCTS DISTRIBUTOR OR MAGNUM VENUS PRODUCTS.

***NOTICE: All statements, information and data given herein are believed to be accurate and reliable but are presented without guaranty, warranty or responsibility of any kind express or implied. The user should not assume that all safety measures are indicated or that other measures are not required.***

***DANGER: Contaminated catalyst may cause Fire or Explosion. Before working on the catalyst pump or catalyst accumulator, wash hands and tools thoroughly. Be sure work area is free of dirt, grease or resin. Clean catalyst system components with clean water only.***

**DANGER: Eye, skin and respiration hazard. The Catalyst, MEKP, may cause blindness, skin irritation or breathing difficulty. Keep hands away from face. Keep food and drink away from work area.**

**WARNING: Please refer to your catalyst manufacturer's safety information regarding the safe handling and storage of catalyst. Wear appropriate safety equipment as recommended.**

# Introduction:

MANUALS GOAL: To create a better knowledge and understanding of the operation, maintenance, and repair of MAGNUM VENUS PPRODUCTS (M.V.P.) industrial spray equipment. Assist the equipment operator in all aspects of the equipment operation and maintenance thus allowing for higher production and better quality.

The UltraBond 1:1 Adhesive Unit consists of the following assemblies:

- FRAME ASSEMBLY (APD-1000-ADH)
- CHOP CHECK PUMP ASSEMBLY (CCP-1400-SS)
- DUO SS FLUID SECTIONS (DLS-4600-SS)
- 7” POWERSLIDE POWERHEAD (VPH-7000-DUO)
- 1:1 FRAME ASSEMBLY (DUO-3000)
- HOD PUTTY GUN (HOD-2000)

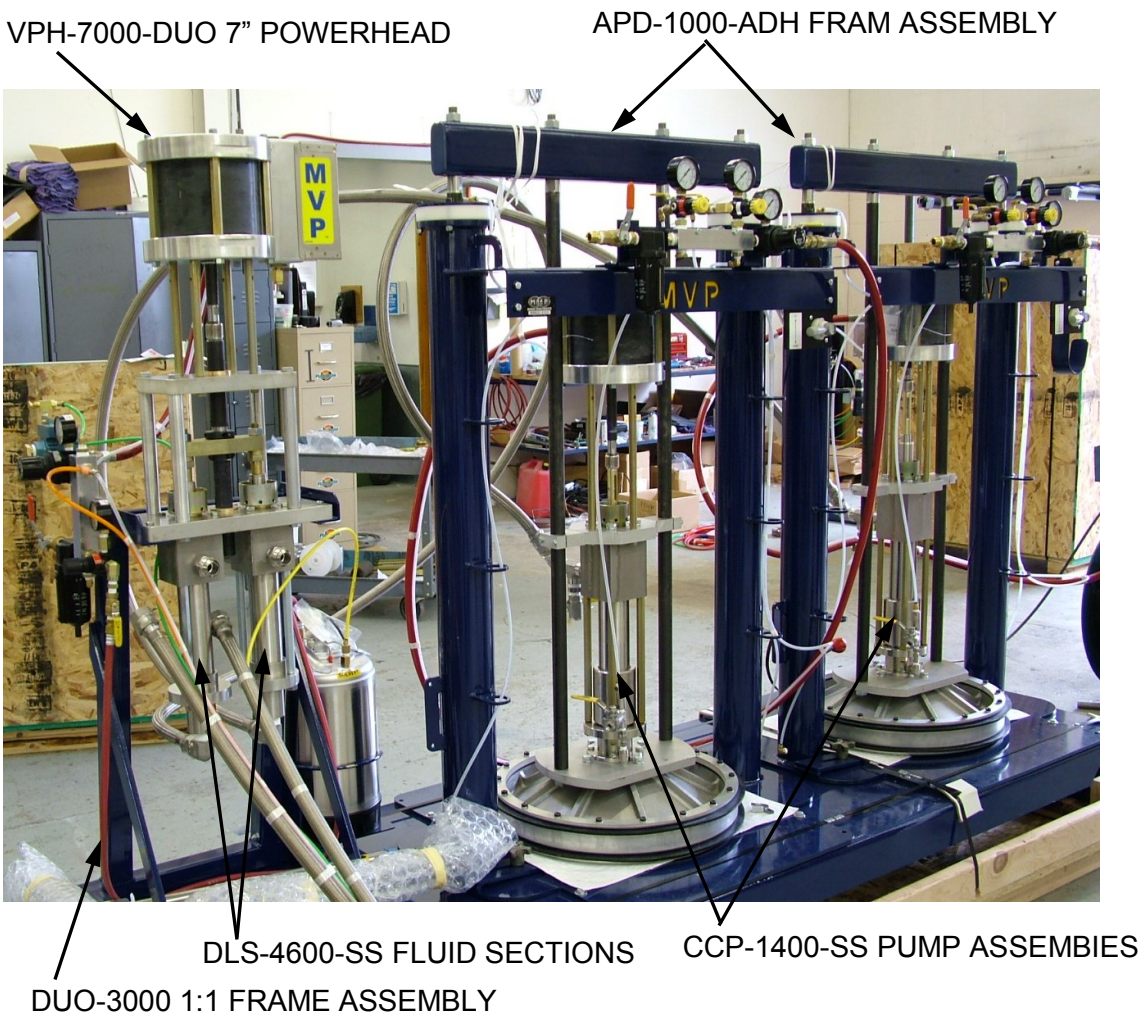

# OPERATING INSTRUCTIONS

Please make sure all appropriate personal protective equipment is used before start up of this unit. Refer to and follow the requirements of the Material Safety Data Sheets supplied by your coating material manufacturer for solvent, adhesive and activator.

***CAUTION: Always wear proper safety equipment (glasses, gloves, respirator, etc.) when working on the dispensing equipment.***

## Air Requirements

1. The system requires a large volume of air (50cfm) and at least 100 psi.
2. We require a 1/2" inch inside diameter air hose minimum preferably 3/4" or bigger to feed the unit.
3. Preferably the air will be clean and dry.

## Hook Up

1. Attach ½ inch air hose from regulator manifold to main air motor on the 1:1 Duo unit (see figure 1)
2. Attach pilot tubing to 1:1 Duo unit pump air motor and solvent pump, if used (see fig. 1)
3. Attach ¼ inch air hose from regulator on manifold to flush pump or flush pot (see figures 2)

Fig. 1

Fig. 2

## Hook Up (cont'd)

4. Attach air hose to the outlet on manifold for air flush (see fig. 3)

fig. 3

5. Attach ½ inch air hose to ball valve on manifold (supply to ram and pumps) (see fig. 4)

fig. 4

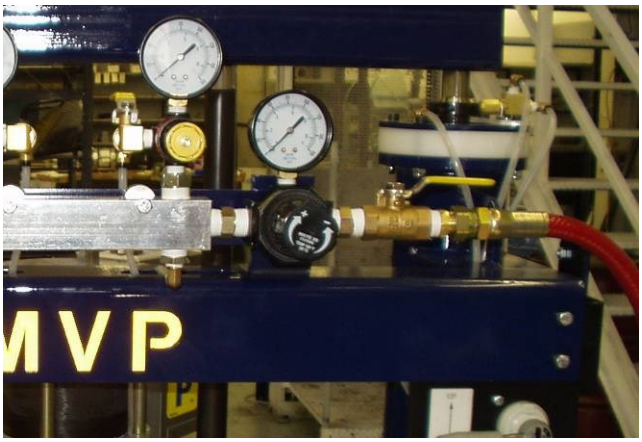


6. Attach air hoses to the air motors on ram pumps (see fig. 5)

fig. 5

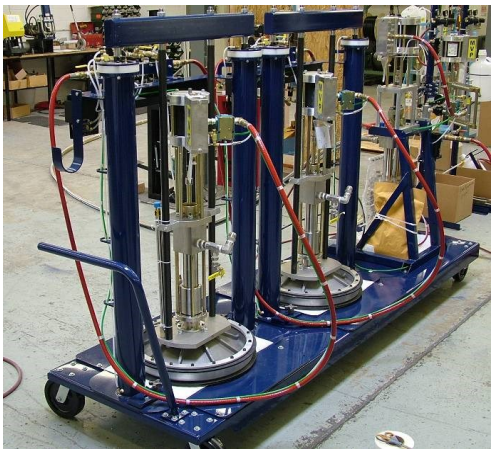

***Note: Stainless steel hoses kink easily when not under pressure***

7. Attach stainless steel hoses from outlet of ram pumps to the inlets of the 1:1 Duo unit (see figures 6 & 6a)

Fig. 6

Fig. 6a

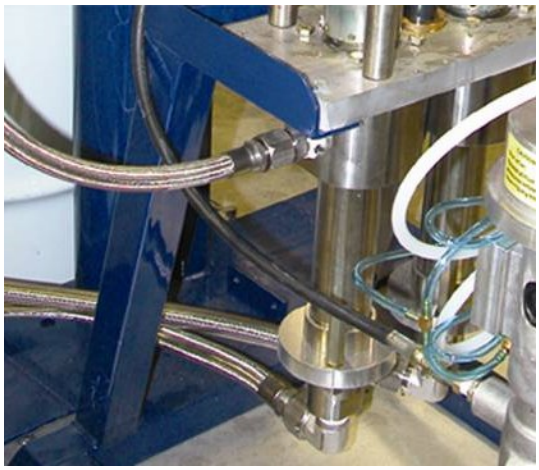

8. Attach stainless steel hoses to the outlets of the 1:1 Duo unit (see fig. 7)

fig. 7

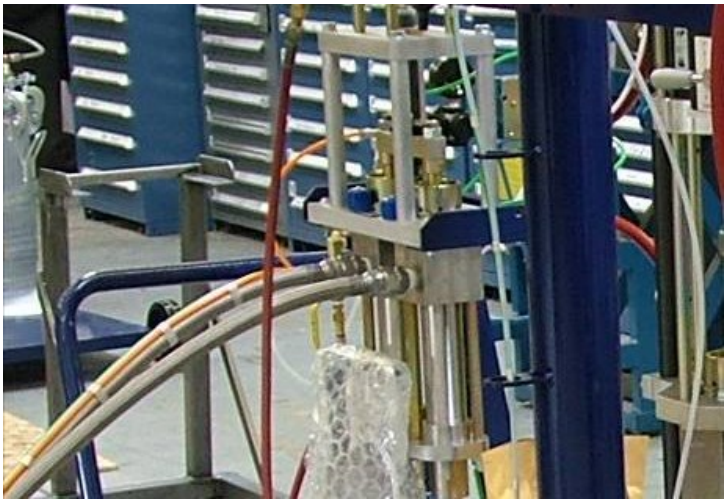

9. Attach solvent flush hose to outlet of flush pump or flush pot (see fig. 8 & 9)

Fig. 8

Fig. 9

## Hook Up (cont'd)

10. Screw pickup tube into solvent flush pump inlet (see fig. 10 & 10a)

fig. 10

fig. 10a

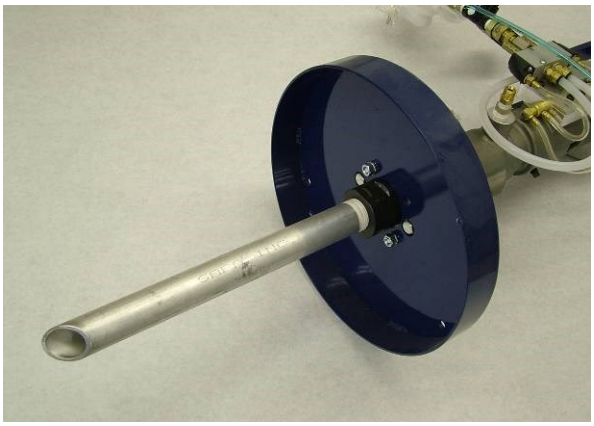

# Priming the Unit:

## Priming Air and Solvent

1. Close the main inlet air valves on the manifolds (see fig. 11)

fig. 11

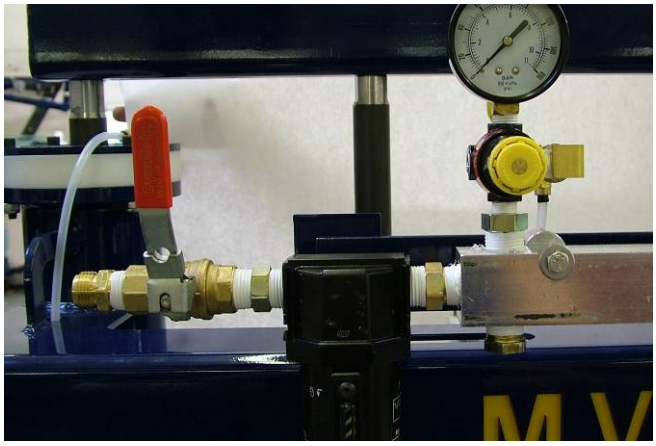

2. Connect 1/2 inch main air feeds to the three manifolds.
3. Turn all regulators counterclockwise to full off and close all ball valves
4. Turn air regulators down on rams as well
5. Make sure Ram control lever is in “neutral” position on both rams (see fig. 12)

fig. 12

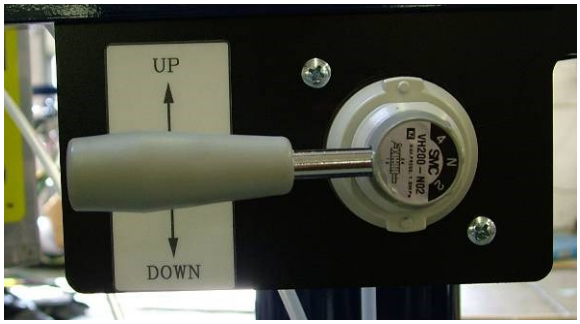


6. Open main air feed ball valve and listen for air leaks. The ball valve has a safety relief port and air will leak from the port until the valve is fully open or closed.
7. Secure all fittings and correct leaks if found
8. Place solvent pump onto an approved container full of the appropriate cleaning agent.

## Priming Air and Solvent - cont'd

9. Slowly turn up regulator pressure to solvent pump or flush pot, if pump is used turn up regulator until pump begins stroking (see fig. 13)

fig. 13

11. Secure all solvent leaks, if any

12. Bring solvent pump pressure up to 35–40 psi (2.2 - 2.8 bar) on regulator gauge or 50 psi (3.5 bar) for flush pot. (reference fig. 13)

13. Wait for solvent pump to stall or stop

14. Test flush system on gun block, by pressing the flush button, test both solvent and air purge. (see fig. 14 & 15)

fig. 14

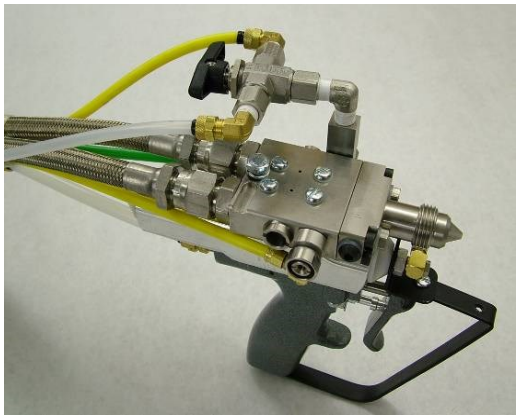

fig. 15

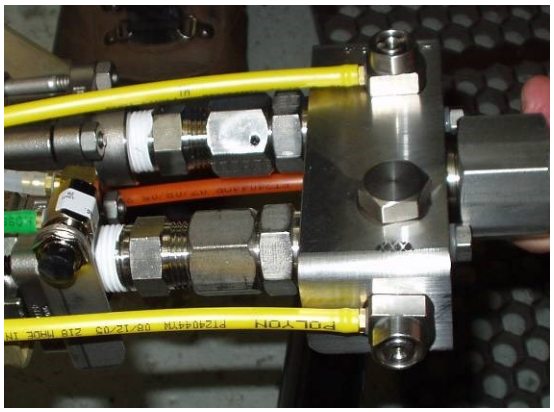

## Priming of Adhesive and Activator Ram Transfer Pumps

1. Fill solvent cups with throat seal liquid (see fig. 16)

fig. 16

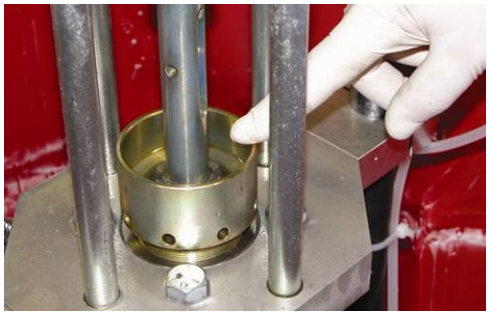

2. Slowly turn up ram pressure to 30 psi
3. Slowly open ram control lever to “up” position (see fig. 17)

fig. 17

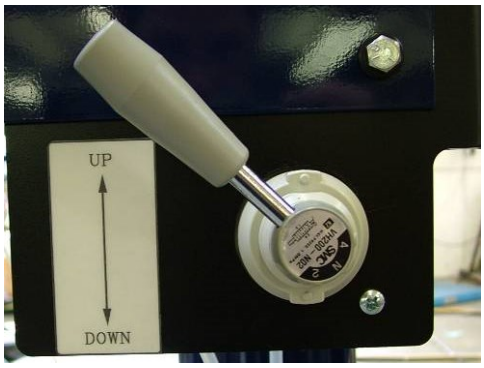


4. Ram should begin to lift, check for hoses catching
5. Allow ram to go to full “up” position (clearance for drum)
6. Remove drum cover and plastic cover from activator. If the drum has a plastic liner it is helpful to fold the liner over and tape to the outside of the drum so it will not slide into the drum and bunch up.
7. Place enclosed plastic Piston Boot (60531-1) over center of drum. (use plastic boot as a template to make more before installing)
8. Slide drum into position under ram
9. Recheck Piston Boot (60531-1) as the opening must be lined up with intake of pump
10. Open vent on bottom of follower plate and place small cup underneath (see fig. 18)

fig. 18

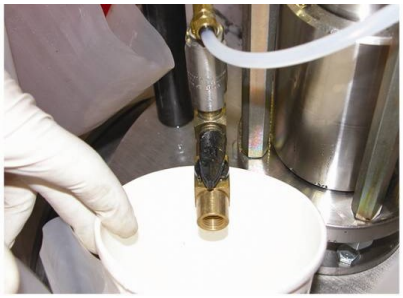

## Priming of Adhesive and Activator Ram Transfer Pumps - cont'd

11. Slowly turn ram control lever to "down" position (fig. 19)

fig. 19

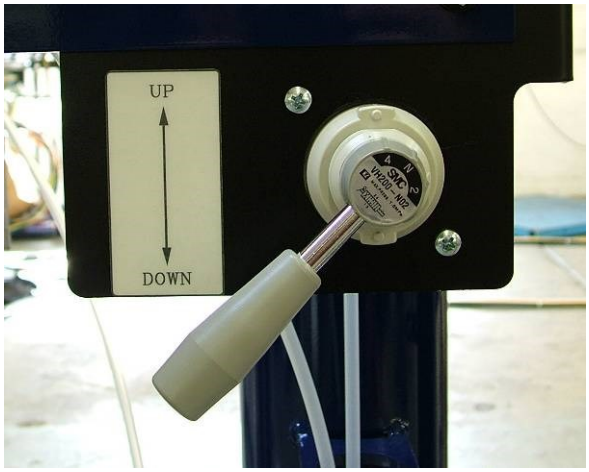


12. Ram should start moving down slowly
13. Check for alignment of Piston as it enters drum and position drum accordingly
14. Watch for Piston Boot as Piston enters drum
15. Allow Piston to continue down until it stops, you should hear and feel air venting from drum out of vent valve as this occurs
16. Once Piston and pump are down, turn ram pressure up to 60 psi and allow continued venting
17. Once air venting has stopped or material beings to flow close vent valve
18. Leave ram control lever in "down" position
19. Repeat the priming procedure for the adhesive side as well

## Priming of 1:1 Duo unit and Dispensing Block

1. Fill solvent cups with throat seal liquid (see fig 20)

fig. 20

## Priming of 1:1 Duo unit and Dispensing Block - cont'd

2. Slowly turn up pump pressure on Activator ram pump to 20 psi (1.2 bar)
3. Pump should begin to stroke and check for leaks on all stainless steel hose connections
4. Secure leaks, if any
5. Allow pump to continue pumping until pump stalls
6. Repeat these steps for Adhesive ram pump
7. Press and hold the priming button while slowly turn up the pump pressure on 1:1 Duo unit to 20 psi (1.2 bar). (see figure 21)

fig. 21

8. Ram pumps may begin stroking as well
9. Allow pump to stall then release the priming button
10. Remove mixer or night cap from the front of dispensing block / gun (see fig. 22 & 23)

fig. 22

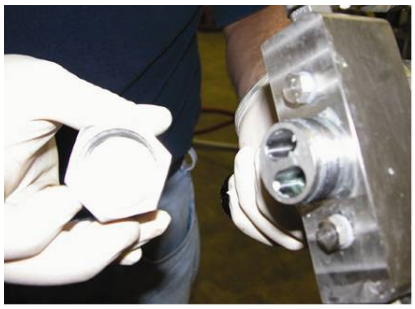

fig. 23

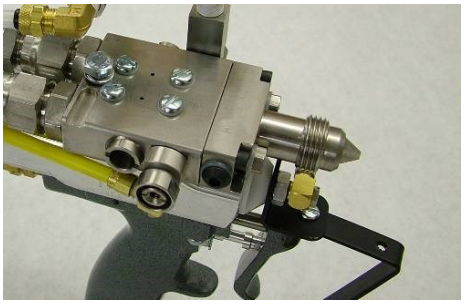

11. Position dispensing block / gun over an appropriate waste container to allow priming of lines (see fig. 24)

fig. 24

12. Fully open the dispensing block / pull trigger on the gun
13. Allow Activator and Adhesive to flow into the container until all air is removed from lines
14. Close dispensing block / gun
15. Position outlet of block / gun over a flush container
16. Press air purge button, a sudden purge of material from dispensing block is likely and could splash, so be cautious (see fig. 25 or 25a)

fig. 25

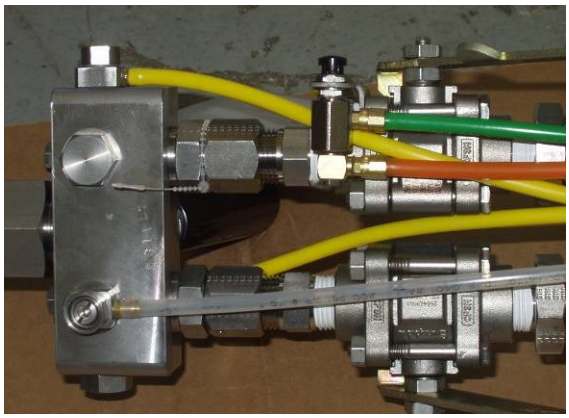

fig. 25a

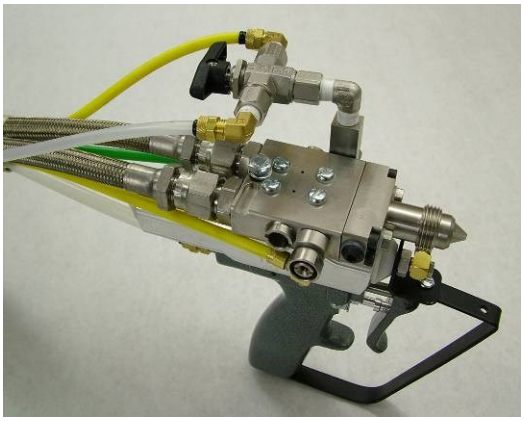

17. Allow air to flow for 3-4 seconds (see fig. 25 or 25a)
18. Press flush button to solvent purge for 3-4 seconds and again watch for splashing
19. Repeat flush process for both Adhesive and Activator several times.

# Mixing & Dispensing:

1. Attach static mixer to outlet on dispensing block / gun, apply lubricant to threads prior to attachment (see fig. 26 & 27)

fig. 26

fig. 27

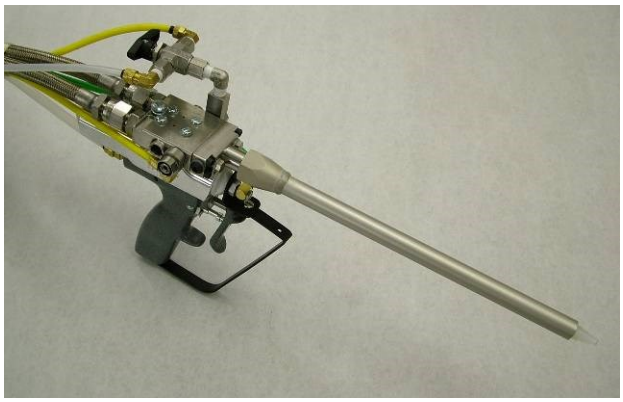

2. Open dispensing block and allow mixed material to flow out of mixer into a container for 4-5 seconds
3. Begin dispensing a bead of material and check for mix by reviewing uniformity of color (see fig. 28)

fig. 28

4. Observe action of 1:1 Duo unit, if pump “dives” (moves very quickly) on downstroke, adjust feed pumps on activator and adhesive by increasing pressure on regulators in 5 psi increments until diving stops
5. **A special precaution must be taken when adjusting feed pumps, it is important not to run the pumps too high or they will overcome the valves in the 1:1 Duo unit and could cause off ratio problems**

## Output and Ratio Check Adjustments

1. With the unit primed, it is now possible to check ratios
2. With the block / gun in the “off” position, remove outlet plugs from front of dispensing block (see fig. 29)

fig. 29

3. Attach and secure outlet cap and gasket to dispensing block (see figures 30), if you are using the 1:1 Pro Gun attach the ratio check mix housing (DUO-4200) to the front of the 1:1 Pro Gun (shown in figure 31 with optional ball valves). (see fig. 31)

fig. 30

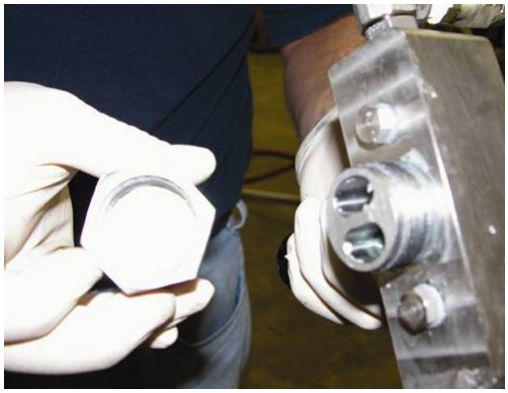

fig. 31

4. Position a cup under each outlet, preferably identical in size and weight (see fig. 32)

fig. 32

## Output and Ratio Check Adjustments - continued

5. Open valve on block and allow material to flow for at least 10 seconds (see fig. 32)
6. Close dispensing block and weigh cups (see figures 33 & 34)

fig. 33

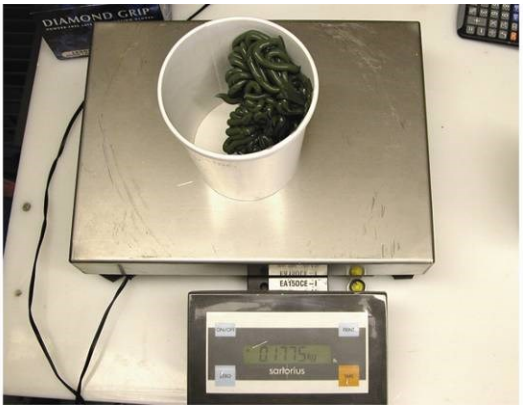


fig. 34

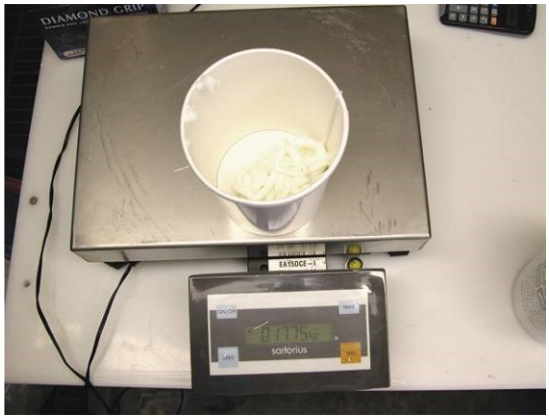


7. There will always be small discrepancies in weight due to flow and density
8. If weights are off by more than 10%, the feed pumps may need adjusting
9. Two methods can be used to compensate for ratios
   i. Decrease the feed pump of the higher weight material by 5 psi and recheck
   or
   ii. Increase the feed pump of the lower weight material by 5 psi
10. Repeat steps until accurate ratios are achieved
11. The output of the material is achieved by increasing the 1:1 Duo unit pressure.
12. The output checks should be done with the mixer on the block
13. The pressure can be increased in 5 psi increments until the desired output is achieved.

***Note:*** ***The unit is capable of approximately 2 GPM with material that is 78 – 80 ºF***

14. If the 1:1 Duo unit pump pressure is increased, it may be necessary to adjust the feed pumps as well and check for ratio accuracy
15. Once a desired output is reached, it is best to operate in this range and avoid continued adjustments

# Flushing & Shut-Down:

1. When finished with dispensing, it is necessary to flush and clean mixer and block
2. Open dispensing valve momentarily to allow 1:1 Duo unit pump shafts to run to full down position
3. Close dispensing block valve all the way
4. Position outlet of mixer into approved waste container
5. Slowly open 3 way flush valve to air and allow air to purge for 4-5 seconds
6. Then turn 3 way flush valve to solvent purge for 4-5 seconds
7. Repeat steps 4 and 5
8. We recommend at this point removing the mixer housing and pushing out the mixer elements into a container for cleaning. An appropriate bottle brush should be used for cleaning out the mixer housing and the mixer elements should be cleaned by hand (see figures 35 & 36)

fig. 35

fig. 36

8a. Clean out the outlet ports as much as possible in the dispensing heads with solvent and brush

8b. Attach and secure outlet cap on the end of the dispensing block

8c. Inspect mixer elements for wear and breakage and replace if necessary

9. If you are using a disposable mixer assembly check for blockages or hardened material build up inside the mixer tube and replace as necessary. (see figure 37)

10. Turn main air “off” to system and clean the block handle.

11. Relieve the air pressure from the flush tank by lifting the relief valve ring.

fig. 37

# Changing Empty Drum:

1. Position drum catch by sliding over base of drum rim (see fig. 38)

fig. 38

2. Turn ram control lever to “neutral” position
3. Slowly turn up follower extraction regulator to 35 psi
4. Adjust ram pressure down to 35 psi
5. Turn ram control lever to “up” position
6. Hold drum down if it shifts
7. Open and close ram control lever intermittently to raise follower and pump out of drum
8. It may be necessary to adjust both ram and follower pressures accordingly to necessitate removal
9. After pump and follower are removed, inspect, seal and dispose of protector gasket
10. Clean any build up of material on follower gasket as well as follower plate
11. Replace with “new” drum and refer back to procedures for priming new drum.

# Low Level Limit Adjustment:

1. To set the low level limit loosen the bolt holding the shaft collar in place.

2. Slide the shaft collar to the desire position on the post and tighten the bolt back down. (see figure 39)

fig. 39

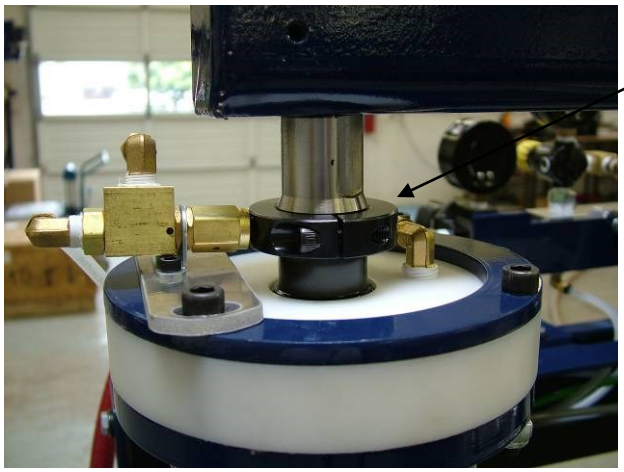


***Note: The valve (09321) for the ADP-1010 turns off the air supply to the air motor valve thus stopping the pump.***

# Component Manuals:

## Adhesive / Activator Transfer Pump Fluid Section Manual:

The UltraBond 1:1 Adhesive system comes standard with the Stainless Steel Chop Check Fluid Section. For detailed repair instructions see the manual "**CCPLS-1000 - Chop Check Fluid Section Manual**"

## Adhesive / Activator Transfer Pump Powerhead Manual:

The UltraBond 1:1 Adhesive system comes standard with the 5" Powerhead.
For detailed repair instructions for the 5" Powerhead see the manual "**MPH, UPPH, VPH-5000 Series Powerhead Manual**"

## Adhesive / Activator Metering Pump Fluid Section Manual:

The UltraBond 1:1 Adhesive system comes standard with the DLS-4600-SS Stainless Steel Fluid Sections. For detailed repair instructions for the DLS-4600-SS see the manual "**VLS-4600 Fluid Section Manual**"

## Adhesive / Activator Metering Pump Powerhead Manual:

The UltraBond 1:1 Adhesive system comes with the 7" Powerhead.
For detailed repair instructions for the 7" Powerhead see the manual "**MPH, UPPH, VPH-7000 Series Powerhead Manual**"

## HOD Units – Dispense Gun:

# Parts Drawings:

| | |
|---|---|
| APD-1000-ADH | FRAME ASSEMBLY |
| APD-1010 | LIMIT VALVE ASSEMBLY |
| CCP-1400-SS | SS CHOP CHECK PUMP ASSEMBLY |
| CPPLS-1000-SS | CHOP CHECK FLUID SECTION ASSY |
| DLS-4600-SS | SS METERING FLUID SECTION |
| DUO-3000 | 1:1 FRAME WORK ASSEMBLY |
| HOD-2000 | DISPENSING HEAD ASSEMBLY |
| MA-34 | AIR MANIFOLD ASSEMBLY |
| VPH-7000-DUO-HD | 7” POWERHEAD ASSEMBLY |

This page left blank intentionally.

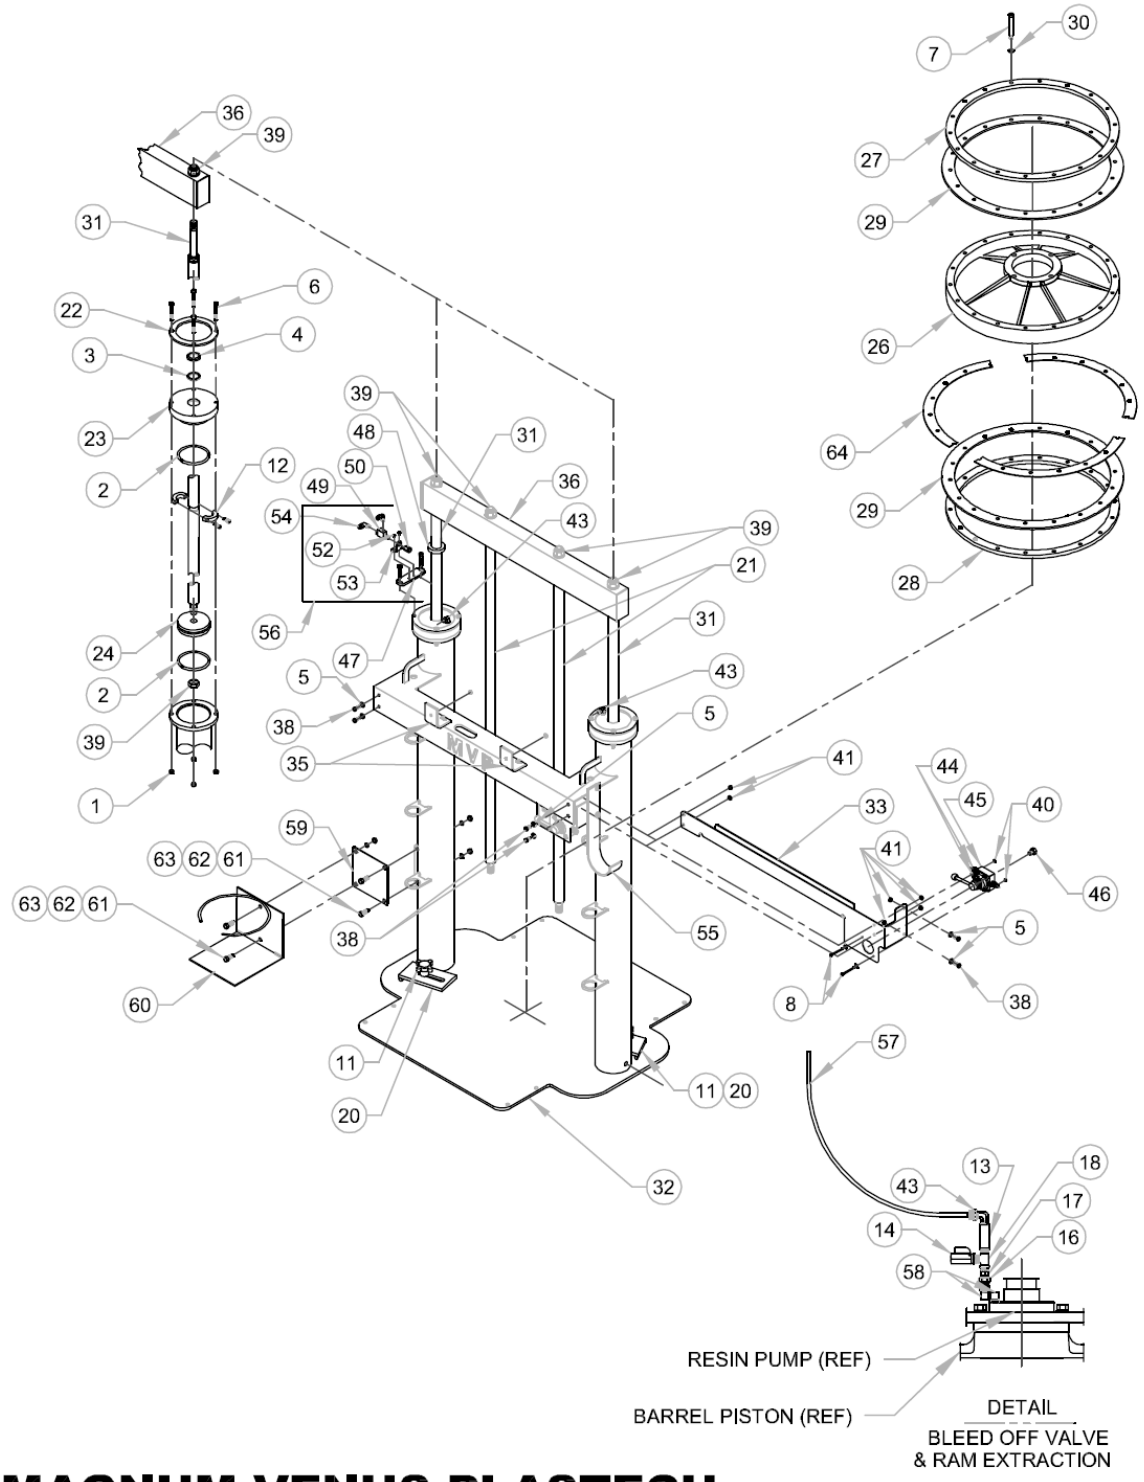


**MAGNUM VENUS PLASTECH**

| ASSY - FRAME WORK RAM CYL. | APD-1000-ADH |
|---|---|

REV. B = ITEM 7 WAS 02685-24 SHOULDER BOLT 10/30/07 JEM
REV. C = ITEM 44 WAS PF-HN-04TS-04 05/21/08 BT2
REV. D = ITEM 8 WAS F-PH-832-28, ITEM 38 WAS QTY. 8, ITEM 57 WAS 20 FT., ADDED ITEM 64 11/01/13 BT2

## ASSY - FRAME WORK RAM CYL. APD-1000-ADH

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | F-LN-05C | 8 | LOCK NUT |
| 2 | O-B-342 | 4 | O-RING |
| 3 | 02005 | 2 | CYLINDER ROD SEAL |
| 4 | 02007 | 2 | CYLINDER ROD WIPER |
| 5 | 02576 | 10 | WASHER |
| 6 | 02668-18 | 8 | SOCKET HEAD CAP SCREW |
| 7 | F-SB-06-48-SS | 18 | SS SHOULDER BOLT |
| 8 | 02805-16 | 2 | PAN HEAD SCREW |
| 11 | 06270 | 2 | BARREL HOD DOWN KNOB |
| 12 | 06271 | 2 | CYLINDER ROD CLAMP COLLAR |
| 13 | 06274 | 1 | CHECK VALVE |
| 14 | CM-1005 | 1 | BALL VALVE |
| 16 | PF-SW-04-04J-SS | 1 | SWIVEL ADAPTER |
| 17 | PF-HN-04-04J-SS | 1 | MALE CONNECTOR |
| 18 | PF-PT-04MMF-SS | 1 | FEMALE RUN TEE |
| 20 | APD-1005 | 2 | BARREL CLAMP |
| 21 | APD-1003 | 2 | SUPPORT ROD |
| 22 | 60514-1 | 2 | SUPPORT RING |
| 23 | 60515-3 | 2 | CYLINDER CAP |
| 24 | 60517-1 | 2 | LIFT CYLINDER PISTON |
| 26 | 60519-11 | 1 | BARREL PISTON |
| 27 | 60519-13 | 1 | TOP RING - BARREL PISTON |
| 28 | 60519-5 | 1 | BOTTOM RING - BARREL PISTON |
| 29 | 60520-1 | 2 | SEAL - BARREL PISTON |
| 30 | 60521-1 | 18 | SPACER - BARREL PISTON |
| 31 | APD-1004 | 2 | CYLINDER ROD |
| 32 | APD-1001 | 1 | FRAMEWORK LIFT CYLINDER |
| 33 | 60533-1 | 1 | SUPPORT PANEL |
| 35 | 60539-1 | 2 | MOUNT BRACKET - MANIFOLD |
| 36 | APD-1002 | 1 | WELDMENT - SUPPORT BAR |
| 38 | F-HB-04C-12 | 10 | HEX CAP SCREW |
| 39 | 7201-1-12 | 8 | HEX NUT |
| 40 | F-HN-832 | 2 | HEX NUT |
| 41 | F-HN-04C | 8 | HEX NUT |
| 43 | 7701-6-2 | 5 | POLY ELBOW |
| 44 | 00383 | 3 | POLY CONNECTOR |
| 45 | 06275 | 1 | ROTARY VALVE |
| 46 | MPM-2568 | 1 | BREATHER VENT |
| 47 | APD-1009 | 1 | LIMIT BRACKET |
| 48 | APD-1011 | 1 | SHAFT COLLAR |
| 49 | 09321 | 1 | NORMALLY OPEN VALVE |
| 50 | 09343 | 1 | BALL OPERATOR |
| 52 | F-CS-832-04 | 2 | CAP SCREW |
| 53 | 09068 | 1 | VALVE BRACKET |
| 54 | MPH-2534 | 2 | POLY ELBOW |
| 55 | 60534-1 | 1 | SUPPORT HOOK |
| 57 | MPM-2052-1 | 25 FT. | TUBE |
| 58 | PF-SE-04-SS | 1 | STREET ELBOW |
| 59 | APD-1007 | 1 | MOUNTING BRACKET |
| 60 | 6101-4-01 | 1 | FLUSH TANK BRACKET |
| 61 | F-HB-06C-16 | 4 | HEX BOLT |
| 62 | F-SW-06 | 4 | LOCK WASHER |
| 63 | F-HN-06C | 4 | HEX NUT |
| 64 | 60510-1 | 1 | BACKUP RING (COMPOSED OF 3 SECTIONS) |

### OPTIONAL PARTS & ASSEMBLIES

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 56 | APD-1010 | 1 | RAM LIMIT VALVE ASSY |

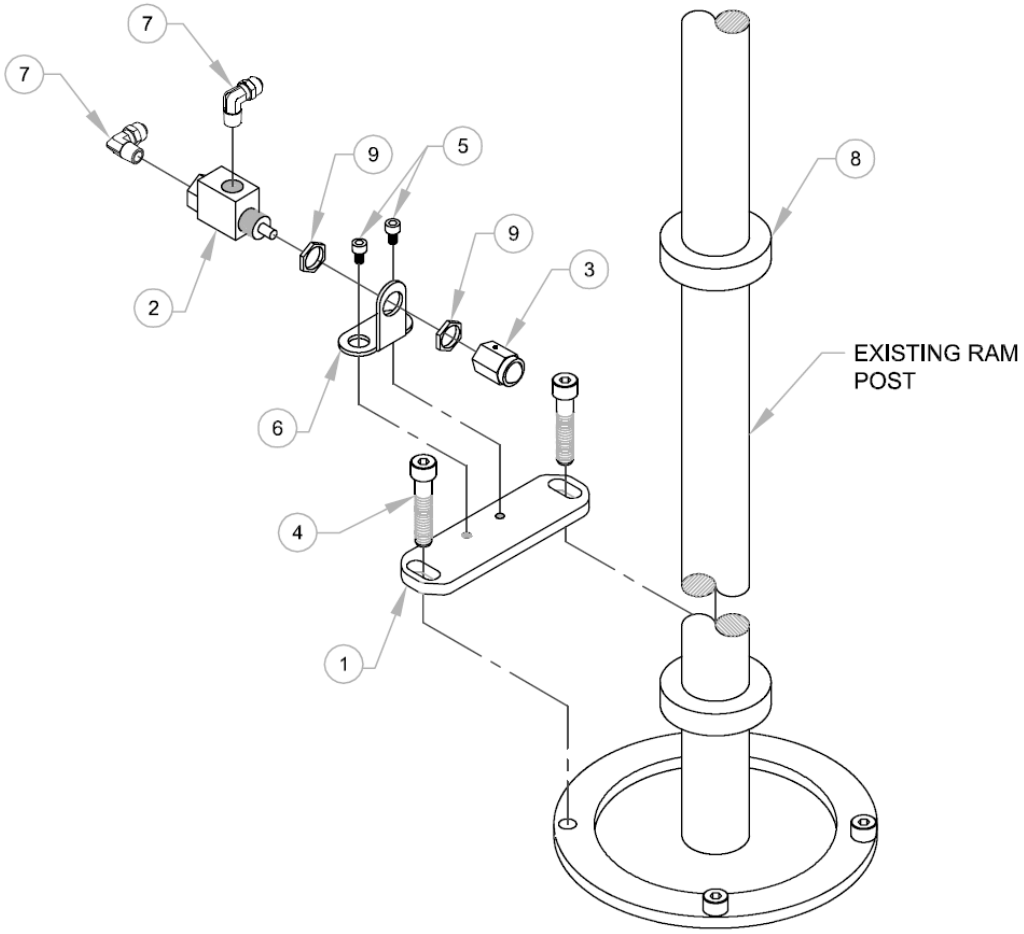


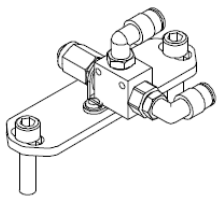

ORIENTATION ON OPPOSITE RAM POST

# MAGNUM VENUS PRODUCTS

| RAM LIMIT VALVE ASSEMBLY | APD-1010 |
|---|---|

REV - 09/08/05 BT2
REV A - CHANGED ORIENTATION OF ITEMS 1 AND 7, ADDED ITEM 9 06/11/14 BT2

## RAM LIMIT VALVE ASSEMBLY APD-1010

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | APD-1009 | 1 | MOUNT BRACKET |
| 2 | 09321 | 1 | NORMALLY OPEN VALVE |
| 3 | 09343 | 1 | BALL OPERATOR |
| 4 | F-CS-05C-20 | 2 | CAP SCREW |
| 5 | F-CS-832-04 | 2 | CAP SCREW |
| 6 | 09068 | 1 | VALVE BRACKET |
| 7 | MPH-2534 | 2 | POLY ELBOW |
| 8 | APD-1011 | 1 | SHAFT COLLAR |
| 9 | MPM-2578 | 1 | SPACER NUT |

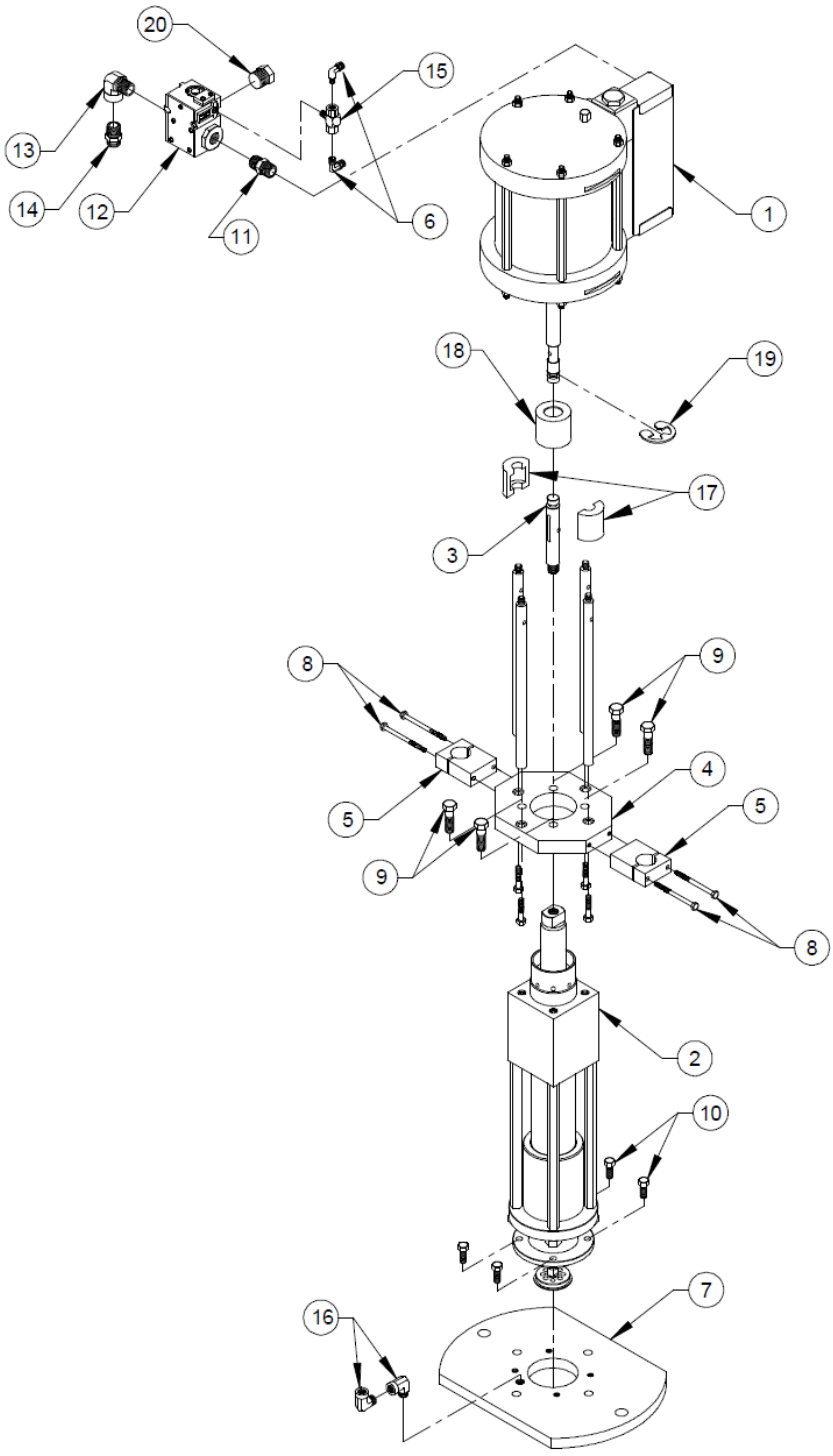


**MAGNUM VENUS PLASTECH**

| CHOP CHECK PUMP FLUID SECTION | CCP-1400-SS |
|---|---|

REV. 3/31/04 JEM
REV. A - ITEM 3 WAS VLS-4613, ITEM 14 WAS 7701-3-7, ITEM 16 WAS 7701-1-1, ADDDED ITEMS 17,18,19 11/19/07 BT2
REV. B - ITEM 9 WAS 02705-14 11/28/07 JEM
REV. C - ADDED ITEM 20 03/18/08 BT2

# COMPLETE PUMP ASSY W / AIR MOTOR CCP-1400-SS
## PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | VPH-5000 | 1 | 5" POWER HEAD ASSY |
| 2 | CCPLS-1000-SS | 1 | PUMP FLUID SECTION |
| 3 | VLS-4613 | 1 | PISTON ROD ADAPTER |
| 4 | CCP-1008 | 1 | PUMP MOUNT PLATE |
| 5 | CCP-1007 | 2 | SUPPORT BRACKET |
| 6 | MPH-2534 | 2 | POLY FITTING ELBOW |
| 7 | CCP-1009 | 1 | SUPPORT PLATE |
| 8 | 02650-28 | 4 | HEX BOLT |
| 9 | F-HB-08C-28-GR5 | 4 | HEX BOLT |
| 10 | F-HB-06C-16 | 4 | HEX BOLT |
| 11 | PF-HN-08 | 1 | NIPPLE |
| 12 | 8407-1-1 | 1 | MAC VALVE |
| 13 | PF-SE-08 | 1 | STREET ELBOW |
| 14 | PF-HN-08-08S | 1 | FITTING |
| 15 | 8407-3-1 | 1 | SHUTTLE VAVLE |
| 16 | PF-SE-04-SS | 2 | ELBOW FITTING |
| 17 | APP-9096 | 2 | CONNECTOR |
| 18 | APP-9109 | 1 | SLEEVE |
| 19 | APP-9102 | 1 | RETAINER RING |
| 20 | PF-HP-12 | 1 | HEX PLUG |

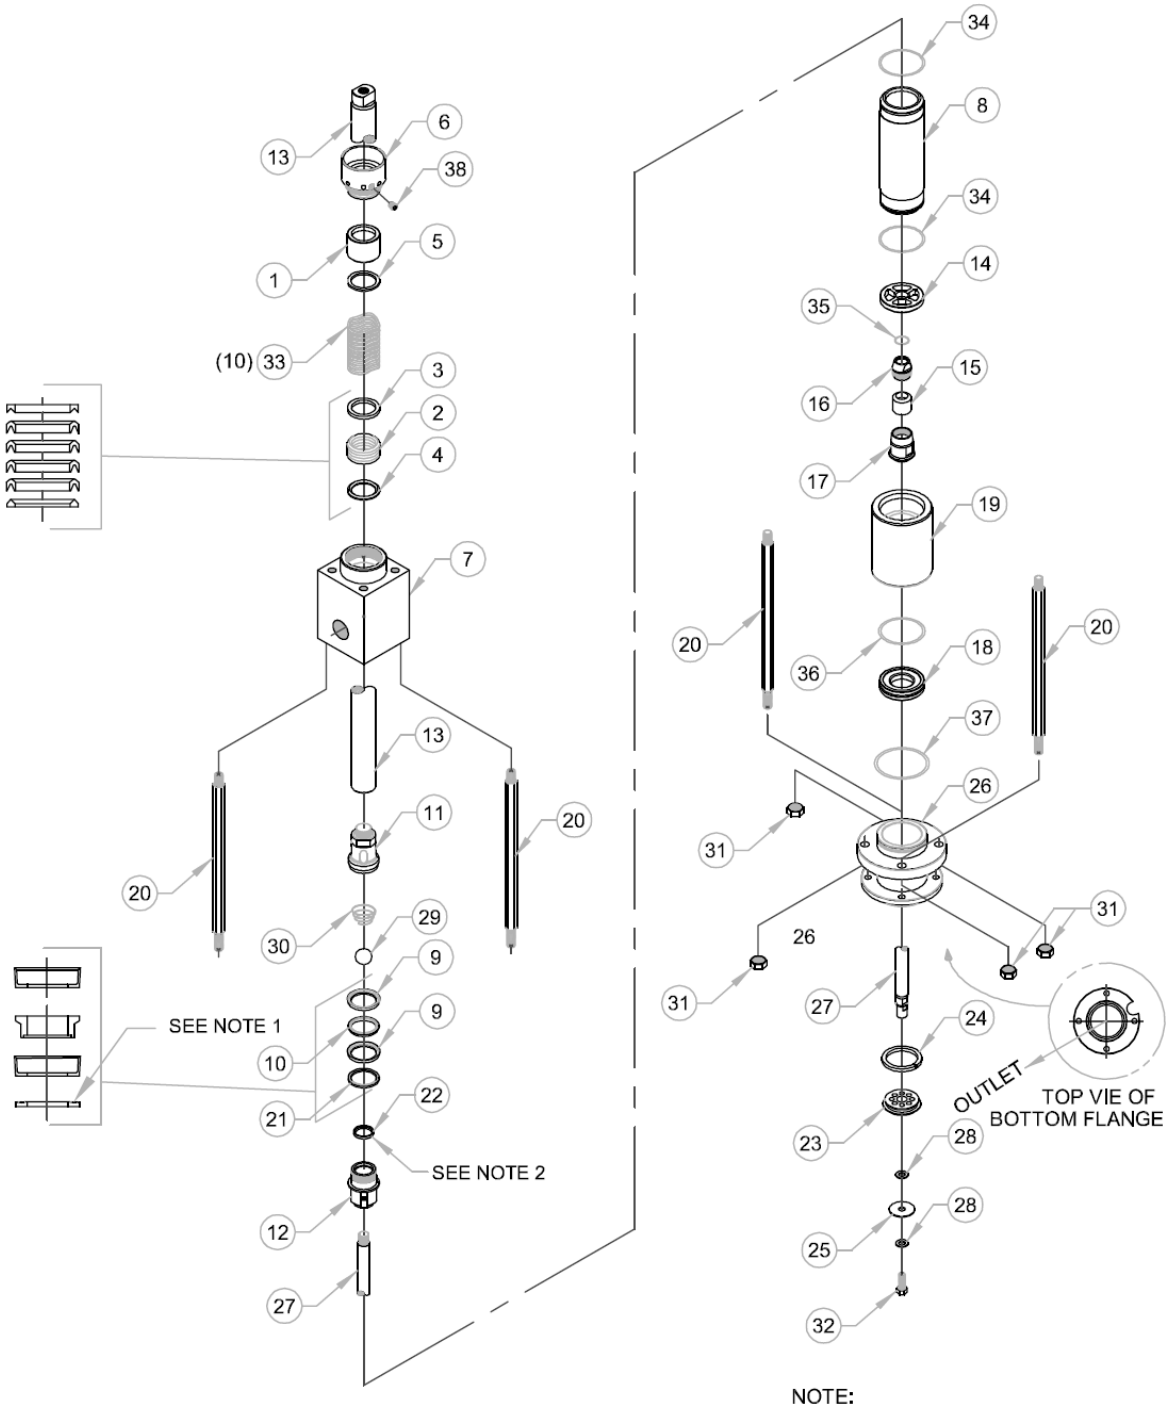


NOTE:
1. INSTALL WITH RIDGES UP
2. ITEM 22 IS PRESSED INTO ITEM 12

**MAGNUM VENUS PLASTECH**

| CHOP CHECK PUMP FLUID SECTION SS | CCPLS-1000-SS |
|---|---|

REV. C = ITEM 31 WAS 7201-1-10 04/06/06 BT2
D = ITEM 29 WAS VLS-4622-440C 5/10/06 JEM
E = ADDED NOTE # 2 04/11/13 BT2
F = UPDATED KIT TO -SS VERSION 11/14/13 BT2

## CHOP CHECK PUMP FLUID SECTION CCPLS-1000-SS

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | CCPLS-1001 | 1 | ROD BUSHING - DISPLACEMENT ROD |
| * 2 | CCPLS-1002 | 4 | V PACKING |
| 3 | CCPLS-1003-SS | 1 | FEMALE COMPRESSION RING |
| 4 | CCPLS-1004-SS | 1 | MALE COMPRESSION RING |
| 5 | CCPLS-1005 | 1 | SPRING SUPPORT RING |
| 6 | CCPLS-1006 | 1 | PACKING NUT |
| 7 | CCLPS-1007-SS | 1 | OUTLET BODY |
| 8 | CCPLS-1008-SS | 1 | CYLINDER |
| * 9 | CCPLS-1009 | 2 | PISTON CUP |
| 10 | CCPLS-1010-SS | 1 | PISTON CUP SPACER |
| 11 | CCPLS-1011-SS | 1 | UPPER PISTON BODY |
| 12 | CCPLS-1012-SS | 1 | LOWER PISTON BODY |
| 13 | CCPLS-1013-SS | 1 | DISPLACEMENT ROD |
| 14 | CCPLS-1014-SS | 1 | VALVE STOP |
| * 15 | CCPLS-1015 | 1 | LWR INTAKE VALVE SEAL |
| 16 | CCPLS-1016-SS | 1 | INTAKE VALVE PACKING NUT |
| 17 | CCPLS-1017-SS | 1 | INTAKE VALVE |
| 18 | CCPLS-1018-SS | 1 | LOWER VALVE SEAT |
| 19 | CCPLS-1019-SS | 1 | FOOT VALVE HOUSING |
| 20 | CCPLS-1020 | 4 | TIE ROD |
| 21 | CCPLS-1021-SS | 1 | PISTON CUP BACKUP RING |
| 22 | CCPLS-1022-SS | 1 | PISTON BALL SEAT |
| 23 | CCPLS-1023-SS | 1 | PRIMING PISTON |
| * 24 | CCPLS-1024 | 1 | PISTON SEAL |
| * 25 | CCPLS-1025 | 1 | RELIEF WASHER |
| 26 | CCPLS-1026-SS | 1 | PRIMING VALVE HOUSING |
| 27 | CCPLS-1027-SS | 1 | PRIMING ROD |
| 28 | CCPLS-1028 | 2 | BACKUP WASHER |
| * 29 | VLS-4622-SS | 1 | 1-1/4" DIA SS BALL |
| 30 | 3102-16-1 | 1 | BALL CHECK SPRING |
| 31 | 7201-12-8 | 4 | HEX NUT |
| 32 | F-HB-06F-12 | 1 | HEX CAP SCREW |
| 33 | CCPLS-1029 | 10 | WAVE SPRING |
| * 34 | O-E-144 | 2 | O-RING |
| * 35 | O-E-018 | 1 | O-RING |
| * 36 | O-E-145 | 1 | O-RING |
| * 37 | O-E-150 | 1 | O-RING |
| 38 | PF-AP-02 | 1 | ALLEN PIPE PLUG |

* PARTS INCLUDED IN CCPLS-1000-SS-RK REPAIR KIT

### REPAIR KIT

| PART NO. | DESCRIPTION |
|---|---|
| CCPLS-1000-SS-RK | REPAIR KIT |

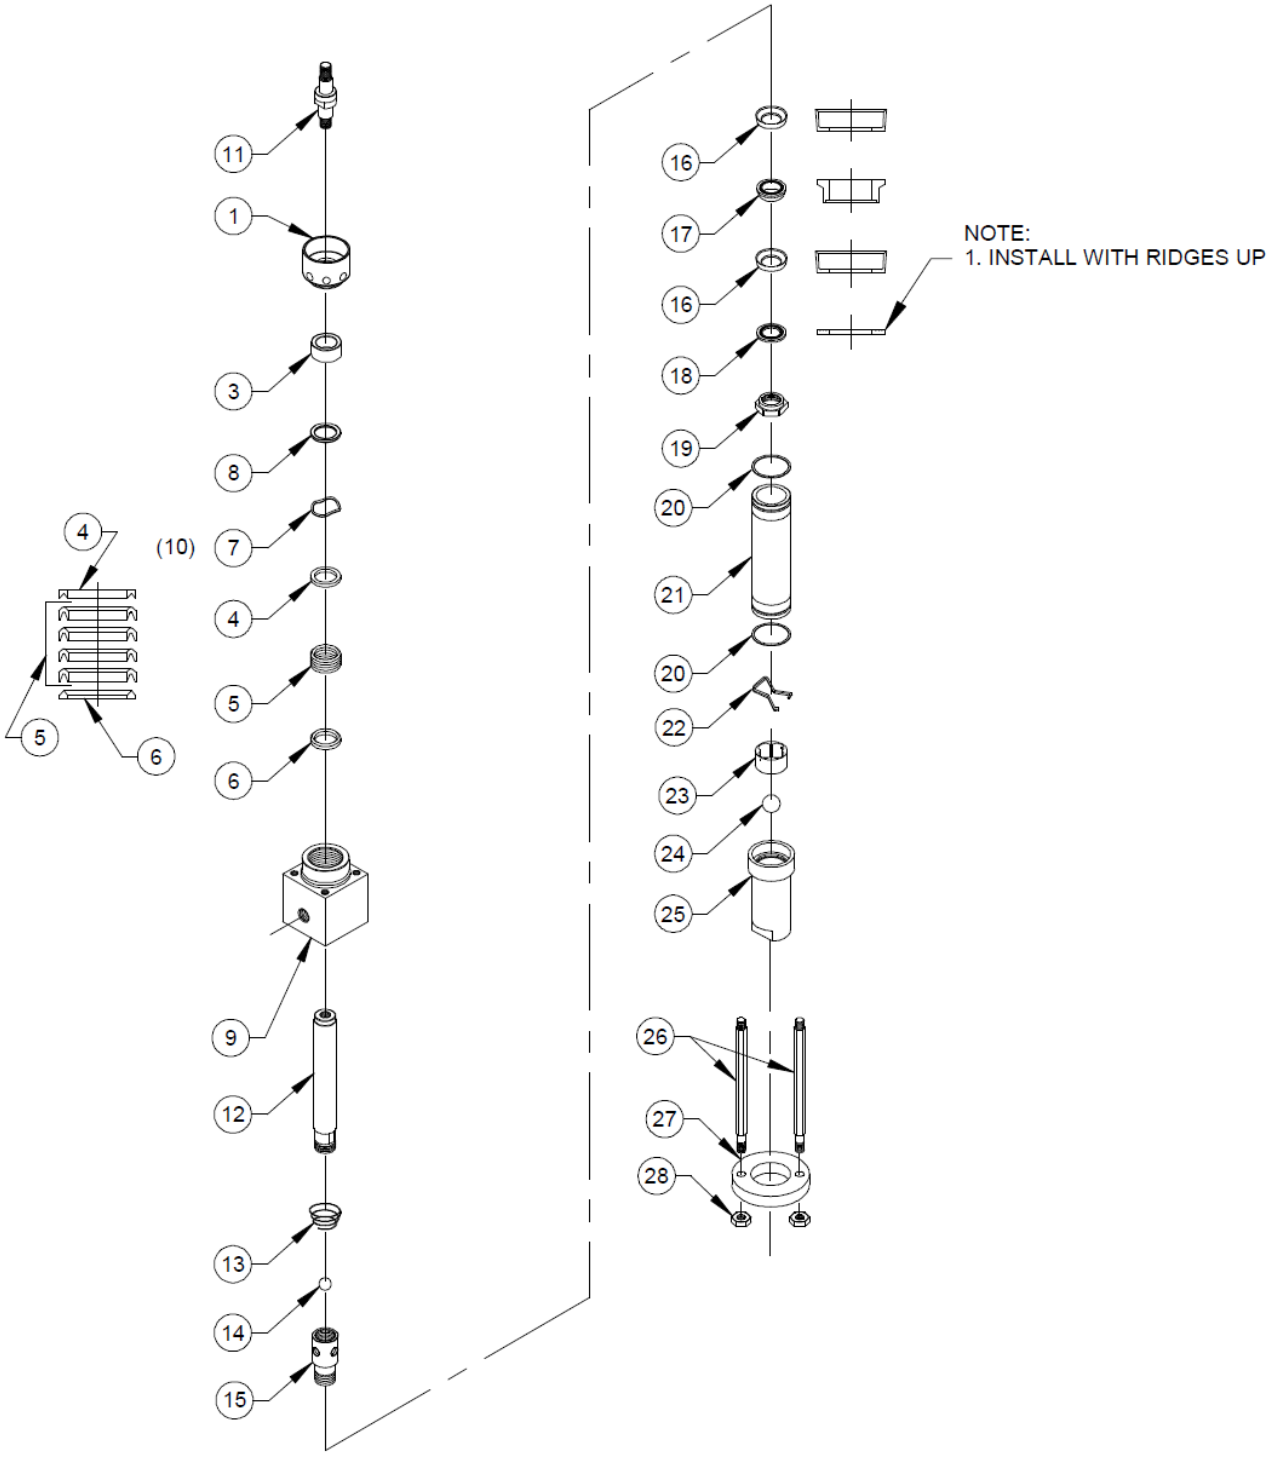


# MAGNUM VENUS PRODUCTS

| FLUID SECTION ASSEMBLY | DLS-4600-SS |
|---|---|

REV. A = ITEM S 14 & SS WERE 316 SS 9/20/04 JEM

## Fluid Section Assy DLS-4600-SS

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | VLS-4607 | 1 | SOLVENT CUP PKG NUT |
| 3 | VLS-4603 | 1 | GUIDE BEARING |
| 4 | VLS-4604-SS | 1 | FEMALE COMP RING |
| *5 | VLS-4605 | 1 | PACKING SET SPA |
| 6 | VLS-4606-SS | 1 | MALE COMPRESSION RING |
| 7 | VLS-4610 | 10 | WAVE SPRING |
| 8 | VLS-4611 | 1 | SPRING SUPPORT RING |
| 9 | VLS-4601-SS | 1 | OUTLET BODY |
| 11 | DLS-4613 | 1 | PISTON ROD ADAPTER |
| 12 | VLS-4609-SS | 1 | PISTON ROD |
| 13 | VLS-4614 | 1 | PISTION BALL SPRING |
| *14 | ALS-1018-440C | 1 | 7/8" SS BALL |
| 15 | VLS-4619-SS | 1 | PISTON BODY |
| *16 | VLS-4615 | 2 | PISTION CUP |
| 17 | VLS-4616-SS | 1 | PISTON CUP SPACER |
| 18 | VLS-4617-SS | 1 | PISTON CUP BACK-UP |
| 19 | VLS-4618-SS | 1 | PISTON NUT |
| *20 | O-E-137 | 2 | O-RING |
| 21 | VLS-4608-SS | 1 | CYLINDER |
| 22 | VLS-4620-SS | 1 | BALL STOP |
| 23 | DLS-4602-SS | 1 | BALL GUIDE |
| *24 | VLS-4622-440C | 1 | 1 1/4" SS BALL |
| 25 | VLS-4602-SS | 1 | FOOT VALVE |
| 26 | VLS-4623 | 2 | PUMP CYLINDER TIE ROD |
| 27 | VLS-4624 | 1 | FOOT VALVE COLLAR |
| 28 | F-HN-08C | 2 | 1/2" UNC HEX NUT |

* INCLUDED IN REPAIR KIT

### REPAIR KITS

| PART NO. | DESCRIPTION |
|---|---|
| *DLS-4600-SS-RK | REPAIR KIT |

### TOOLS

| PART NO. | DESCRIPTION |
|---|---|
| 45011-1 | PISTON BODY WRENCH |

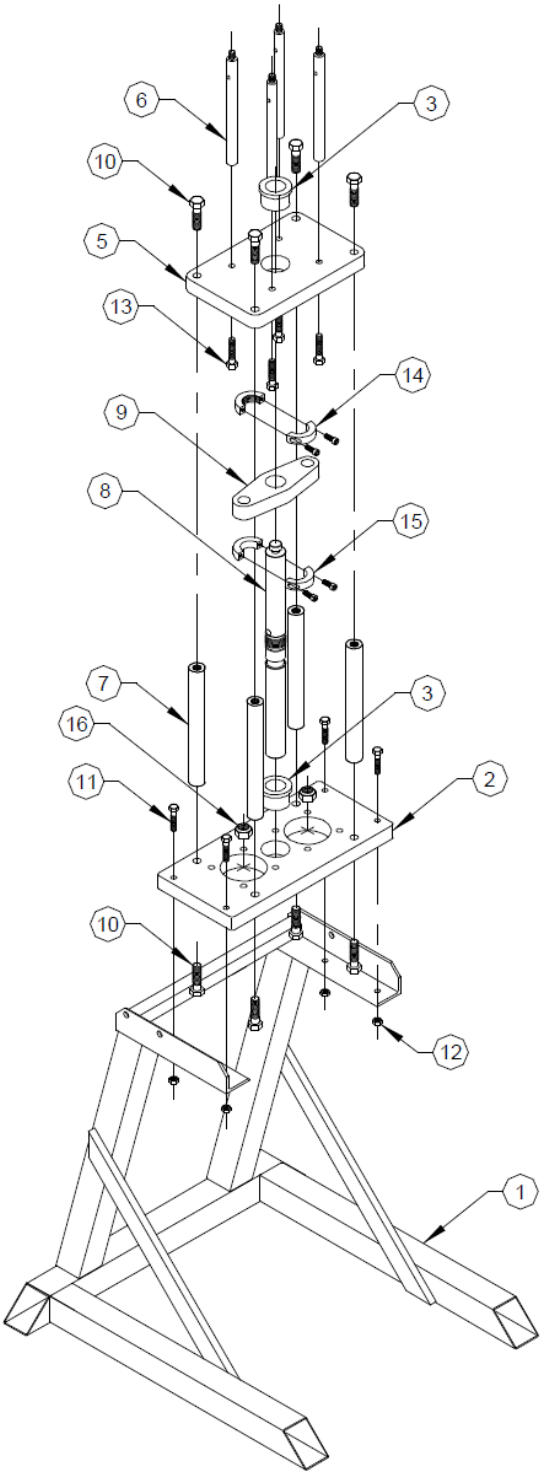


# MAGNUM VENUS PRODUCTS

| 1:1 Fix Ratio Frame Assembly | DUO-3000 |
|---|---|

REV. A - UPDATED ITEM 16 08/07/06 BT2
REV. B - ITEM 10 WAS F-HB-08C-28 11/28/07 JEM

# 1:1 Fix Ratio Frame Assembly

## PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | DUO-3001 | 1 | FRAME WELDMENT |
| 2 | DUO-3002 | 1 | MIDDLE PLATE |
| 3 | DUO-3003 | 2 | BUSHING |
| 5 | DUO-3005 | 1 | TOP PLATE |
| 6 | DUO-3006 | 4 | TIE ROD 1:1 FRAME |
| 7 | DUO-3007 | 4 | CHASSIS ROD |
| 8 | DUO-3008 | 1 | DRIVE ROD |
| 9 | DUO-3009 | 1 | CROSS BAR |
| 10 | F-HB-08C-28-GR5 | 8 | HEX BOLT |
| 11 | F-HB-05C-24 | 4 | HEX BOLT |
| 12 | F-HN-05C | 4 | HEX NUT |
| 13 | F-HB-06C-28 | 4 | HEX BOLT |
| 14 | DUO-3010 | 1 | SHAFT COLLAR |
| 15 | DUO-3011 | 1 | SHAFT COLLAR |
| 16 | F-HN-10F | 2 | HEX NUT |

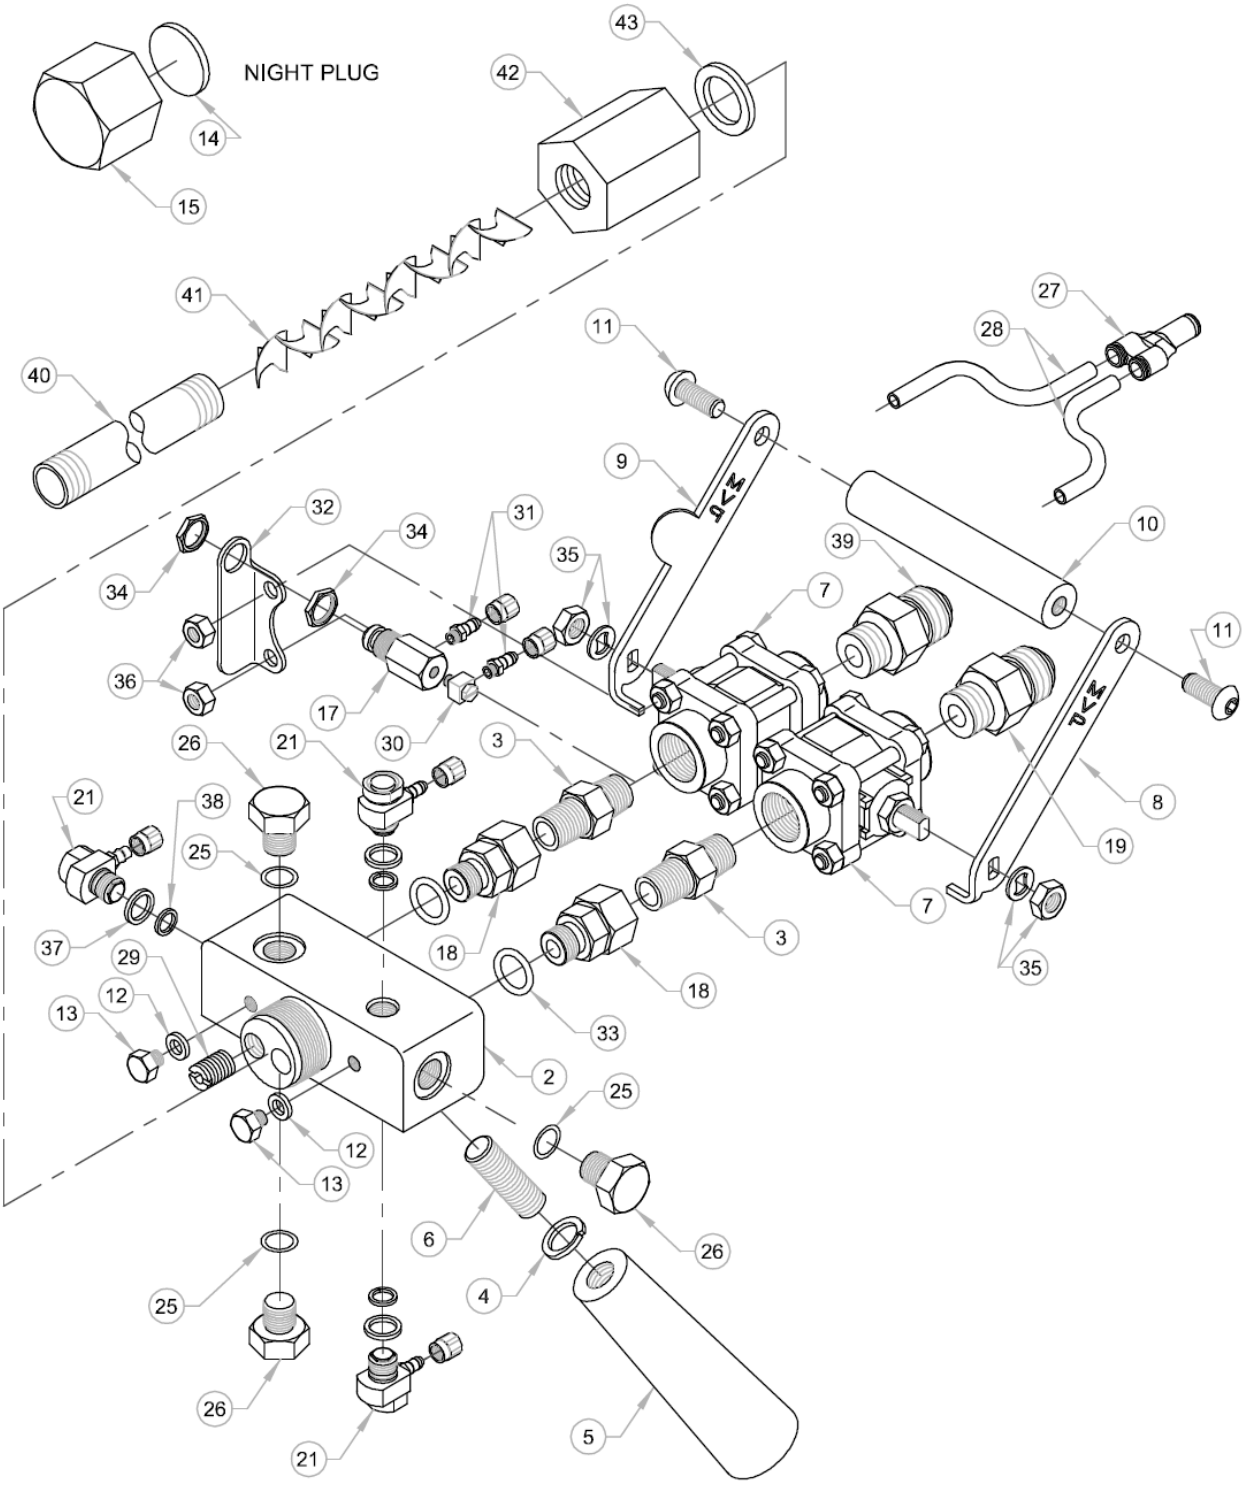


# MAGNUM VENUS PLASTECH

## DISPENSING HEAD ASSY / ADHESIVES HOD-2000

REV D = ADDED ITEM 33, 37,38 & OPTS FOR 29, ITEMS 34,35 &36 WERE,33,34,&35 6/17/05 JEM
REV E = ADDED ITEM 39, ITEM 31 QTY WAS 2, ITEM 19 QTY WAS 2 6/27/06 JEM
REV F = ADDED ITEMS 40, 41, 42, AND 43 08/06/07 BT2
REV G = ADDED MPD-9000-VK TO REPAIR KITS, DELETED ITEM 16 02806-2 09/08/09 BT2

## DISPENSING HEAD ASSY HOD-2000
### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 2 | HOD-2001 | 1 | DISPENSING BLOCK |
| 3 | PF-HN-08-SS | 2 | 1/2-NPT HEX NIPPLE |
| 4 | F-SW-08 | 1 | SPRING LOCK WASHER |
| 5 | HOD-1004 | 1 | HANDLE |
| 6 | F-SS-08C-24 | 1 | HANDLE STUD |
| 7 | HOD-1011-BV | 2 | 1/2-NPT SS BALL VALVE |
| 8 | HOD-1008-L | 1 | LEFT LEVER - BALL VALVE |
| 9 | HOD-1008-R | 1 | RIGHT LEVER - BALL VALVE |
| 10 | HOD-1010 | 1 | LEVER HANDLE |
| 11 | F-BHCS-05C-12 | 2 | BUTTON HEAD CAP SCREW |
| * 12 | 02441-1 | 2 | SEAL - GUN PLUG |
| 13 | 53110-1 | 2 | GUN PLUG |
| * 14 | HOD-1012 | 1 | CAP SEAL |
| 15 | HOD-1002 | 1 | CAP PLUG |
| 17 | 09169 | 1 | 3-WAY VALVE |
| 18 | PF-SW-12MS-08F-SS | 2 | SWIVEL FITTING |
| 19 | PF-HN-16J-08-SS | 1 | HOSE NIPPLE |
| 21 | 5104-01-01 | 3 | ASSY - FLUSH BUTTON |
| * 25 | O-S-013 | 3 | O-RING |
| 26 | CM-1053 | 3 | PLUG |
| 27 | 06946 | 1 | Y FITTING |
| * 28 | MS-2052-1 | 2FT | 1/4 x 12 POLY TUBE |
| ‡ 29 | HOD-2002-X | 1 | RATIO RESTRICTER |
| 30 | TRU-1021 | 1 | ELBOW |
| 31 | TRU-1022 | 2 | BARB FITTING |
| 32 | HOD-1009 | 1 | VALVE BRACKET |
| * 33 | O-V-3-908 | 2 | O-RING |
| 34 | | 2 | HEX NUT (SUPPLIED WITH ITEM 17) |
| 35 | | 2 EA | HEX NUT & WASHER (SUPPLIED WITH ITEM 7) |
| 36 | | 2 | HEX NUT (SUPPLIED WITHITEM 7) |
| * 37 | 5104-26-1 | 3 | FLUSH VALVE SEAL (SUPPLIED WITH ITEM 21) |
| * 38 | 5104-21-1 | 3 | SPLIT SEAL (SUPPLIED WITH ITEM 21) |
| 39 | PF-HN-08-08J-SS | 1 | HOSE NIPPLE |
| 40 | 05260 | 1 | MIXER TUBE (INCLUDES MIXERS) |
| 42 | 54861-1 | 1 | UNION - HV GUN |
| * 43 | 02029-1 | 1 | SEAL |

## REPAIR KITS

| PART NO. | DESCRIPTION |
|---|---|
| * HOD-2000-SK | REPAIR KIT |
| MPD-9000-VK | REPAIR KIT FOR HOD-1011-BV |

‡ **NOTE:**
THE INSIDE DIAMETER OF ITEM 29 (HOD-2002-X) CHANGES WITH THE VISCOSITY OF HARDENER PUMPED.
3 SIZES ARE INCLUDED WITH THE GUN - HOD-2002-3, HOD-2002-5, AND HOD-2002-7.
OPTIONAL SIZES ARE LISTED BELOW.

## OPTIONAL PARTS & ASSEMBLIES

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 29A | HOD-2002-1 | 1 | RATIO RESTRICTOR |
| 29B | HOD-2002-9 | 1 | RATIO RESTRICTOR |
| 29C | HOD-2002-11 | 1 | RATIO RESTRICTOR |
| 41 | MPD-9750-03 | 4 | REPLACEMENT MIXER |

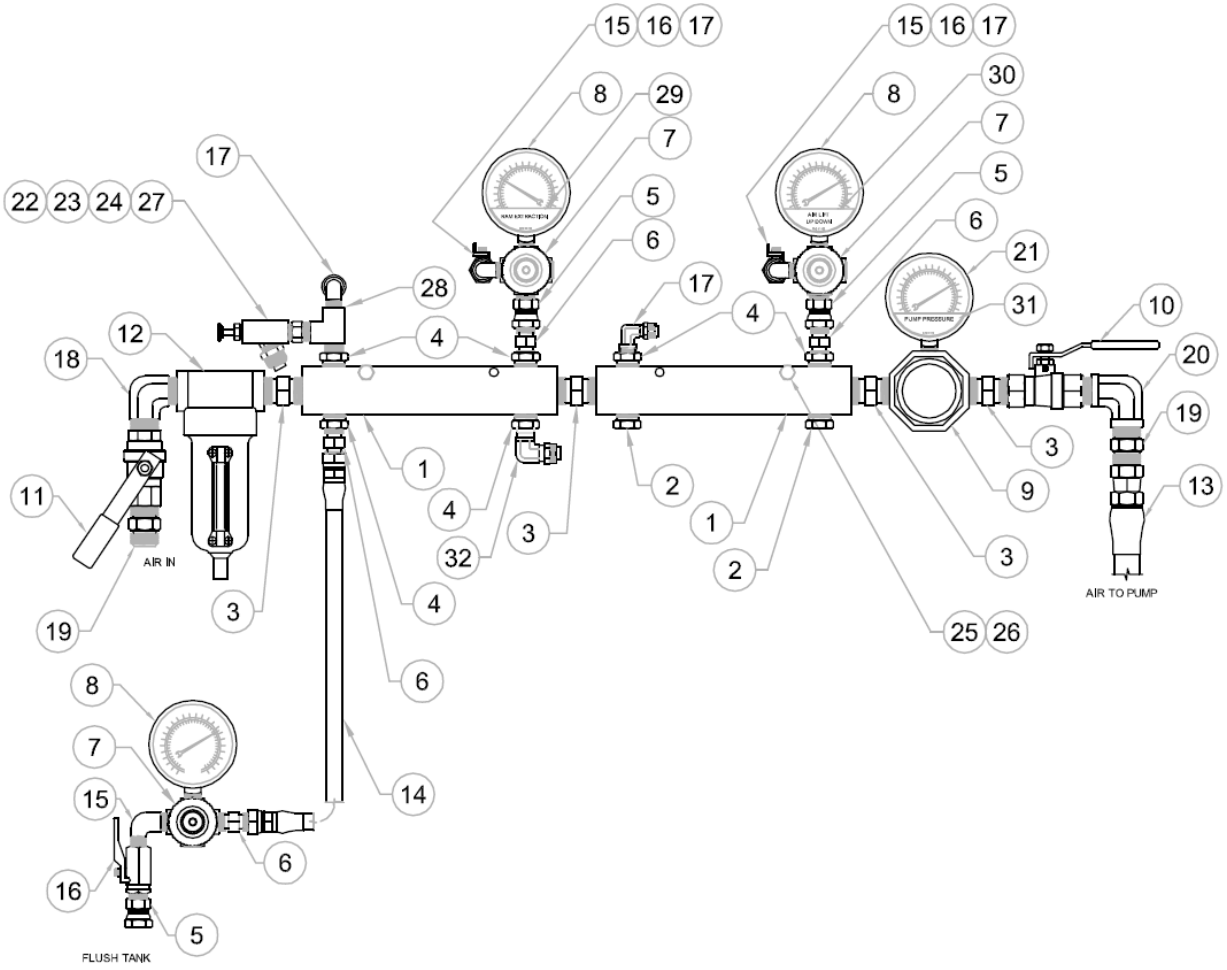


# MAGNUM VENUS PLASTECH

## PUMP / RAM Manifold Assembly MA-34

REV. E = FIXED DESCRIPTION FOR ITEM 23 03/12/10 BT2
F = ADDED ITEMS 29, 30, AND 31 07/28/11 BT2
G = REORIENTED ITEMS 11 AND 16 ON DRAWING 02/17/13 BT2
H = ITEM 6 WAS QTY. 5, ADDED ITEM 32 03/13/13 BT2

## Pump / Ram Manifold Assembly MA-34

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | MA-2001-1 | 2 | MANIFOLD BLOCK |
| 2 | PF-HP-08 | 2 | PLUG |
| 3 | PF-HN-08 | 4 | NIPPLE |
| 4 | PF-RB-08-04 | 6 | BUSHING |
| 5 | PF-SW-04 | 3 | SWIVEL ADAPTER |
| 6 | PF-HN-04-04S | 4 | NIPPLE |
| 7 | 09218 | 3 | 1/4" REGULATOR |
| 8 | AG-B2-100 | 3 | 100 PSI GAUGE |
| 9 | 8405-1-1 | 1 | REGULATOR |
| 10 | 09350 | 1 | 1/2" BALL VALVE |
| 11 | 7702-2-2 | 1 | BALL VALVE - VENTED LOCKOUT |
| 12 | 8404-1-1 | 1 | 1/2" FILTER W/METAL BOWL |
| 13 | 01745-1 | 1 | AIR HOSE |
| 14 | HA-0444-6 | 1 | AIR HOSE |
| 15 | PF-ME-04 | 3 | 1/4-NPT MALE ELBOW |
| 16 | BV-FF44-L | 3 | 1/4" BALL VALVE |
| 17 | 7701-6-2 | 4 | TUBE FITTING |
| 18 | PF-ME-08 | 1 | MALE ELBOW |
| 19 | PF-HN-08-08S | 2 | NIPPLE |
| 20 | PF-SE-08 | 1 | STREET ELBOW |
| 21 | AG-B2-160 | 1 | 160 PSI GAUGE |
| 22 | PF-HN-02-04 | 1 | NIPPLE |
| 23 | 8407-4-1 | 1 | 3-WAY VALVE |
| 24 | MPH-2534 | 1 | FITTING |
| 25 | F-HB-04C-32 | 2 | HEX BOLT |
| 26 | F-HN-04C | 2 | HEX NUT |
| 27 | 8407-5-1 | 1 | BUTTON |
| 28 | PF-ST-04-BR | 1 | STREET TEE |
| 29 | 95163-EN | 1 | RAM EXTRACTION GAUGE LABEL |
| 30 | 95157-EN | 1 | AIR LIFT GAUGE LABEL |
| 31 | 95128-EN | 1 | PUMP PRESSURE GAUGE LABEL |
| 32 | 7701-6-17 | 1 | POLY ELBOW |

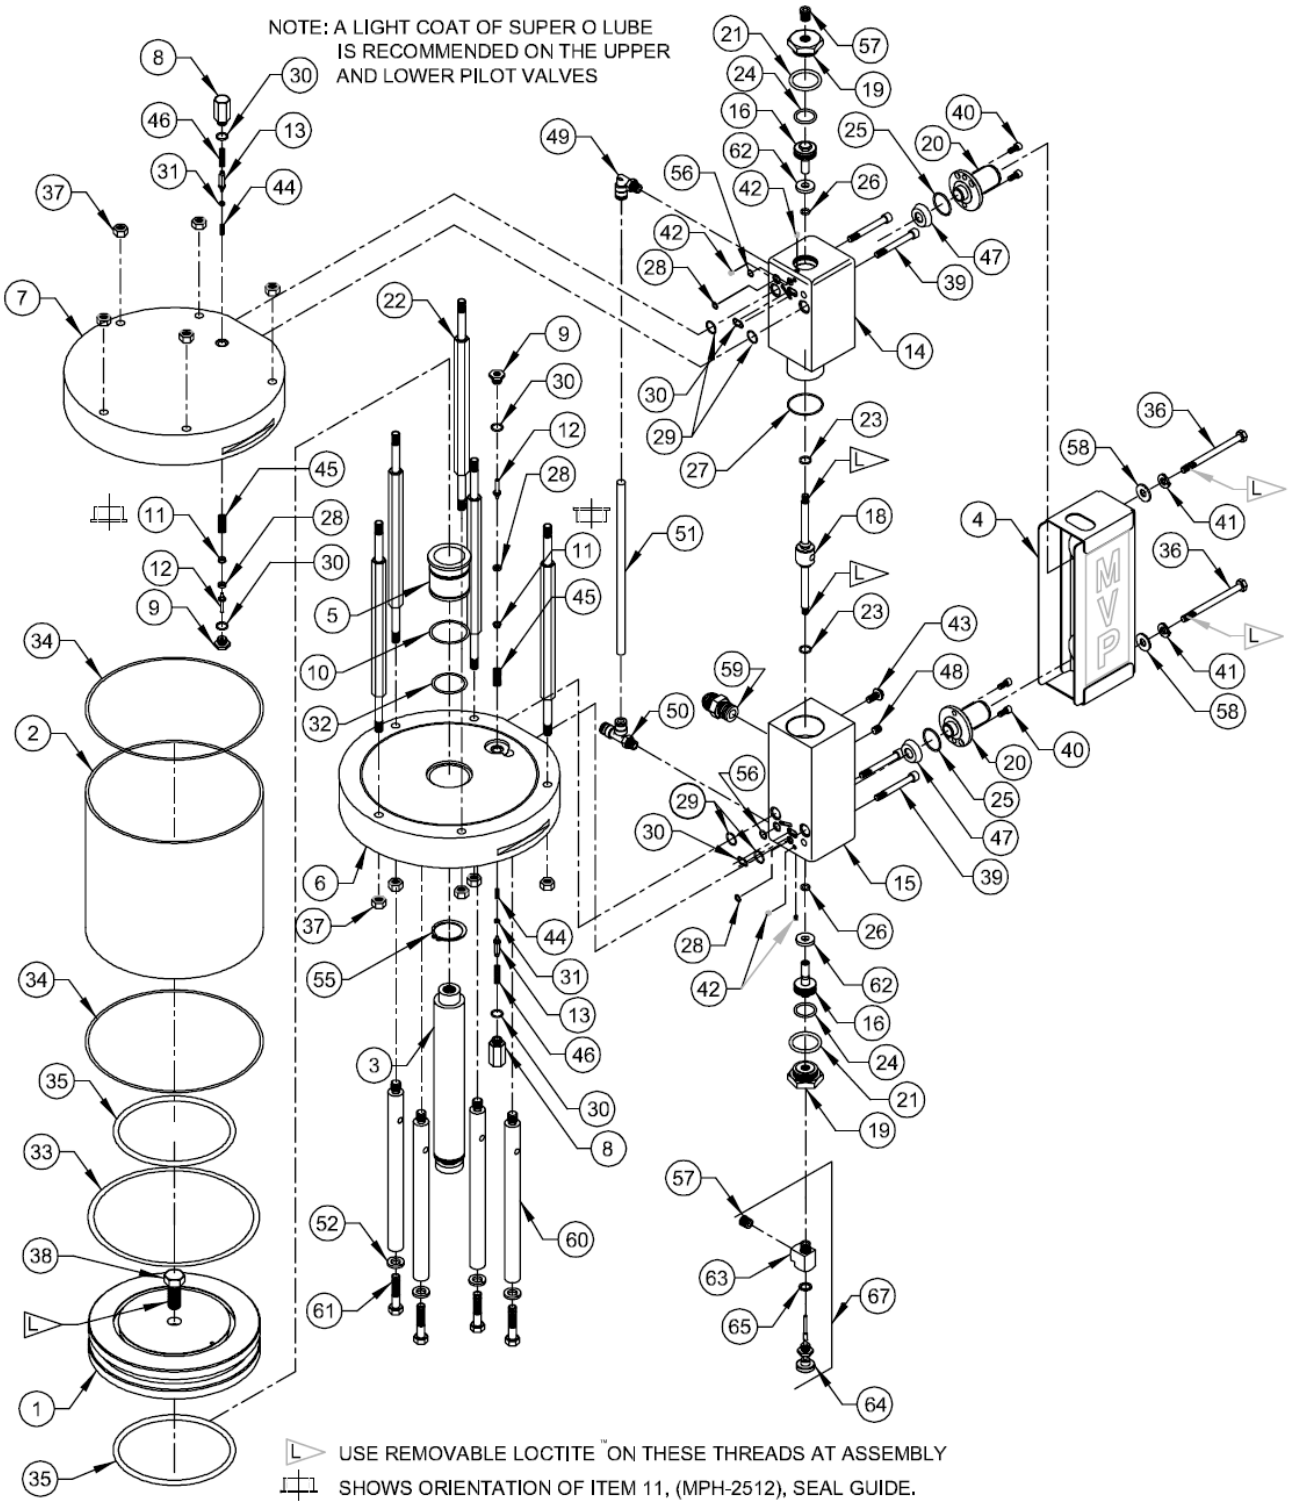
NOTE: A LIGHT COAT OF SUPER O LUBE IS RECOMMENDED ON THE UPPER AND LOWER PILOT VALVES
USE REMOVABLE LOCTITE ™ ON THESE THREADS AT ASSEMBLY
SHOWS ORIENTATION OF ITEM 11, (MPH-2512), SEAL GUIDE.

**MAGNUM VENUS PLASTECH**

| Assembly - 7" Power Head 4" Stroke | VPH-7000-DUO-HD |
|---|---|

REV. - 03/01/11 BT2
REV. A - ADDED SUPER O LUBE NOTE FOR PILOT VALVES 05/25/11 BT2

## 7" Power Head 4" Stroke VPH-7000-DUO-HD

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 1 | MPH-7004 | 1 | PISTON |
| 2 | VPH-7001 | 1 | CYLINDER |
| 3 | VPH-7012 | 1 | PISTON ROD |
| 4 | VPH-5004-01 | 1 | MUFFLER ASSEMBLY |
| 5 | VPH-7005 | 1 | BUSHING |
| 6 | VPH-7002-HD | 1 | LOWER ENDCAP |
| 7 | MPH-7001 | 1 | UPPER ENDCAP |
| 8 | MPH-2541 | 2 | INLET SPRING HOUSING |
| 9 | MPH-2511-01 | 2 | ASSY - STEM SEAL |
| * 10 | O-B-127 | 1 | O-RING |
| 11 | MPH-2512 | 2 | SEAL GUIDE |
| 12 | MPH-2513 | 2 | VALVE STEM - PILOT VALVE |
| 13 | MPH-2540 | 2 | INLET ROD - PILOT VALVE |
| 14 | VPH-5001 | 1 | UPPER VALVE BLOCK |
| 15 | MPH-5001 | 1 | LOWER VALVE BLOCK |
| 16 | MPH-2517 | 2 | VALVE PISTON |
| 18 | VPH-5005 | 1 | VALVE POPPET |
| 19 | MPH-2521 | 2 | VALVE END CAP |
| 20 | MPH-5009 | 2 | VALVE EXHAUST |
| * 21 | O-B-019 | 2 | O-RING |
| 22 | VPH-5003 | 5 | TIE ROD |
| * 23 | O-U-206-90 | 2 | O-RING |
| * 24 | O-B-116 | 2 | O-RING |
| * 25 | O-B-026 | 2 | O-RING |
| * 26 | O-D-010-90 | 2 | O-RING |
| * 27 | O-B-125 | 1 | O-RING |
| * 28 | O-B-008 | 4 | O-RING |
| * 29 | O-B-014 | 4 | O-RING |
| * 30 | O-B-012 | 6 | O-RING |
| * 31 | O-U-006 | 2 | O-RING |
| * 32 | O-B-124 | 1 | O-RING |
| * 33 | O-B-439 | 1 | O-RING |
| * 34 | O-B-167 | 2 | O-RING |
| * 35 | O-B-431 | 2 | O-RING |
| 36 | F-HB-04C-56-SS | 2 | HEX BOLT |
| 37 | F-HN-06F | 10 | HEX NUT |
| 38 | F-HBFT-08C-20-GR5 | 1 | HEX BOLT |
| 39 | F-CS-04C-40-SS | 4 | CAP SCREW |
| 40 | F-CS-04C-08-SS | 4 | CAP SCREW |
| 41 | F-SW-04-SS | 2 | LOCK WASHER |
| 42 | F-SS-832-02-SS | 4 | SET SCREW |
| 43 | F-BHCS-04C-16-SS | 1 | BUTTON HEAD CAP SCREW |
| 44 | MPH-2526 | 2 | SPRING |
| 45 | MPH-2528 | 2 | SPRING |
| 46 | MPH-2533 | 2 | SPRING |
| * 47 | MPH-5010 | 2 | DIAPHRAGM |
| 48 | PF-AP-04-SS | 1 | PIPE PLUG |
| 49 | MPH-2539 | 1 | POLY ELBOW |
| 50 | MPH-2538 | 1 | POLY TEE |
| 51 | MS-2052-1 | .56ft | Ø1/4 TUBING |
| 52 | F-SW-06 | 4 | LOCK WASHER |
| 55 | 7205-2-26 | 1 | SNAP RING |
| * 56 | O-B-011 | 2 | O-RING |
| 57 | PF-AP-02-SS | 2 | PIPE PLUG |
| 58 | F-FW-04 | 2 | FLAT WASHER |
| 59 | PF-HN-08-08S | 1 | ADAPTER |
| 60 | DUO-3006 | 4 | TIE ROD |

### PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 61 | F-HB-06C-24-GR8 | 4 | HEX BOLT |
| 62 | MPH-3262 | 2 | PISTON STOP |
| 63 | PF-ST-02-BR | 1 | TEE FITTING |
| 64 | MPH-2546-01 | 1 | VALVE STEM ASSY |
| 65 | MPH-2545 | 1 | SEAL |
| 66 | DONOTOILAIRMOTOR | 1 | DO NOT OIL DECAL (NOT SHOWN) |

### OPTIONAL PARTS AND ASSEMBLIES PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|---|---|---|---|
| 67 | MPH-2542 | 1 | RESET BUTTON ASSY |
| | VPH-SB-XL | 1 | SHIFT BLOCK ASSY |

### REPAIR KITS

| | PART NO. | DESCRIPTION |
|---|---|---|
| * | VPH-7000-HD-SK | SEAL KIT |

FIGURE 1-1

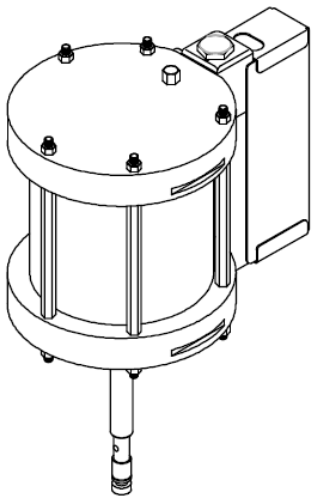

* COMPONENTS INCLUDED WITH SEAL KIT.

# Revision Information:

**Rev. 12/2012** Updated the manual format and Address. We added the Terms & Conditions of Sale and Revision Information sections to this manual. The parts drawing where updated. The sections for the Fluid Section, Powerhead and Dispense Head were also added to this manual.

**Rev. 10/2014** Updated the Address, name and the Terms & Conditions of Sale section. Removed references to Plastech**.** Updated the Parts Drawings section.

MagnumVenusProducts™

**CORPORATE HEADQUARTERS and MANUFACTURING**
**200A Perimeter Park Road · Knoxville, TN 37922 · USA · Tel: +1 (865) 321-8809**

**TECHNOLOGY CENTER and MANUFACTURING**
**1862 Ives Ave. * Kent, WA 98032 * Tel 253-854-2660 * Fax 253-854-1666**

E-mail: info@mvpind.com · www.mvpind.com

Included with this operations manual are the following component manuals:

- ❑ **CCPLS-1000 CHOP CHECK FLUID SECTION MANUAL** - FLUID SECTION
- ❑ **MPH, UPPH, VPH-5000 SERIES MANUAL** - 5” POWERSLIDE POWERHEAD
- ❑ **VLS-4600 FLUID SECTION MANAUL** - DUO SS FLUID SECTIONS
- ❑ **MPH, UPPH, VPH-7000 SERIES MANUAL** - 7” POWERSLIDE POWERHEAD